# **Quartus<sup>™</sup> Tutorial**





ATTERIA.

# Quartus

**Programmable Logic Development System** 

Tutorial



Altera Corporation 101 Innovation Drive San Jose, CA 95134 (408) 544-7000 http://www.altera.com Altera, the Altera logo, and MAX+PLUS II are registered trademarks of Altera Corporation in the United States and other countries. APEX, APEX 20K, APEX 20KE, Atlas, ByteBlasterMV, MasterBlaster, MegaLAB, MegaWizard, EP20K100, Quartus, and the Quartus logo are trademarks and/or service marks of Altera Corporation in the United States and other countries. Product design elements and mnemonics used by Altera Corporation are protected by copyright and/or trademark laws.

Altera Corporation acknowledges the trademarks of other organizations for their respective products or services mentioned in this document, including the following: Microsoft is a registered trademark and Windows NT are trademarks of Microsoft Corporation.

Altera reserves the right to make changes, without notice, in the devices or the device specifications identified in this document. Altera advises its customers to obtain the latest version of device specifications to verify, before placing orders, that the information being relied upon by the customer is current. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty. Testing and other quality control techniques are used to the extent Altera deems such testing necessary to support this warranty. Unless mandated by government requirements, specific testing of all parameters of each device is not necessarily performed. In the absence of written agreement to the contrary, Altera assumes no liability for Altera applications assistance, customer's product design, or infringement of patents or copyrights of third parties by or arising from use of semiconductor devices described herein. Nor does Altera warrant or represent any patent right, copyright, or other intellectual property right of Altera covering or relating to any combination, machine, or process in which such semiconductor devices might be or are used.

Altera products are not authorized for use as critical components in life support devices or systems without the express written approval of the president of Altera Corporation. As used herein:

- 1. Life support devices or systems are devices or systems that (a) are intended for surgical implant into the body or (b) support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
- 2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

```
Products mentioned in this document are covered by one or more of the following U.S. patents: 5,915,017; 5,909,450; 5,909,375; 5,909,126; 5,905,675; 5,904,524; 5,900,743; 5,898,628; 5,898,318; 5,894,228; 5,893,088; 5,892,683; 5,883,526; 5,880,725; 5,880,596; 5,876,596; 5,875,112; 5,873,113; 5,872,59; 5,872,529; 5,872,463; 5,870,410; 5,869,980; 5,869,979; 5,861,760; 5,859,544; 5,859,542; 5,850,365; 5,850,152; 5,850,151; 5,848,005; 5,847,617; 5,845,385; 5,844,854; RE35,977; 5,838,628; 5,838,584; 5,835,998; 5,834,849; 5,822,29; 5,825,197; 5,821,787; 5,821,773; 5,821,771; 5,815,726; 5,815,024; 5,815,003; 5,812,479; 5,812,450; 5,809,281; 5,809,034; 5,805,516; 5,802,540; 5,801,541; 5,796,267; 5,793,246; 5,790,469; 5,787,009; 5,771,264; 5,768,562; 5,768,372; 5,767,734; 5,764,569; 5,764,569; 5,764,569; 5,764,090; 5,771,009; 5,774,099; 5,761,099; 5,760,624; 5,768,562; 5,768,372; 5,767,734; 5,764,569; 5,764,569; 5,764,569; 5,764,999; 5,764,099; 5,760,624; 5,694,569; 5,694,058; 5,694,058; 5,669,155; 5,668,711; 5,680,061; 5,672,985; 5,670,895; 5,669,312; 5,669,455; 5,693,540; 5,694,058; 5,694,058; 5,669,455; 5,693,540; 5,694,058; 5,693,195; 5,668,717; 5,680,061; 5,672,985; 5,670,895; 5,659,717; 5,650,734; 5,644,653; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,109; 5,598,10
```

Altera products are protected under numerous U.S. and foreign patents and pending applications, maskwork rights, and copyrights.

Copyright © 1999 Altera Corporation. All rights reserved.





# Contents

Tutorial Overview	
Tutorial Files	
Command Shortcuts	
Getting Help	
Context-Sensitive Help	
Help Search Index	
Help Contents	
Help Full-Text Search	6
Design Entry	
Session 1: Start the Quartus Software	
Session 2: Create a Project	
Session 3: Create a Block Diagram	
1. Create a New Block Design File	
2. Create a Block	
3. Enter Primitive & Megafunction Symbols	
4. Change the Block Editor Display Options	
5. Enter Input & Output Pin Symbols	
6. Name the Pins	
7. Connect Symbols & Blocks	
8. Map Signals between Blocks	
Session 4: Create Verilog Design Files	
1. Create a Verilog Design File for the hvalues Block	
2. Copy Verilog Design Files for Other Blocks	46
Session 5: Create a Design File with the MegaWizard	
Plug-In Manager	
1. Create a Verilog HDL Variation of a Megafunction	48
2. Add Wizard-Generated Files to the Project	49
Compilation	
Session 6: Specify Compiler Settings	
1. View the Compiler General Settings	
2. Specify the Device Family & Device	
3. Specify the Compiler Mode	
4. Specify Compiler Synthesis & Fitting Settings	
5. Specify Compiler Verification Settings	56
Session 7: Compile the Design	
1. Run the Compiler	
2. Locate the Source of a Message	
3. View the Compilation Report	60

Session 8: View the Fit in the Last Compilation Floorplan	61
1. Open the Last Compilation Floorplan	
2. Display Routing Information	
3. Display Equation Information	
4. Display the MegaLAB View	
Session 9: Assign Logic to an ESB	
1. Back-Annotate Assignments	66
2. Verify the Back-Annotated Assignments	67
3. Create a Location Assignment	67
4. Recompile the Design	70
5. View the Fit in the Last Compilation Floorplan	70
Timing Analysis	72
Session 10: View Timing Analysis Results	73
1. View the f <sub>MAX</sub> Timing Analysis Report	73
2. List the f <sub>MAX</sub> Timing Paths	74
3. Locate an f <sub>MAX</sub> Timing Path in the Floorplan Editor	75
4. View the t <sub>SU</sub> Timing Analysis Report	76
Session 11: Specify Timing Requirements	77
1. Specify the Default Required f <sub>MAX</sub>	78
2. Cut Timing Paths	
Session 12: Perform Multi-Clock Timing Analysis	
1. Create Clock Settings	
2. Assign the Clock Settings to a Pin	
3. Rerun Timing Analysis	86
4. View the Clock Requirement Timing Analysis Section	
Session 13: Specify a Multicycle Path	
1. Create a Multicycle Timing Assignment	
2. Rerun Timing Analysis	
3. View the Clock Requirement Timing Analysis Section	90
Simulation	92
Session 14: Create a Waveform File for Simulation	92
1. Create a New Vector Waveform File	
2. Add Input & Output Nodes to the File	
3. Edit the Input Node Waveforms	
Session 15: Specify Simulator Settings	
1. View the Simulator General Settings	
2. Specify Simulator Time & Vectors Settings	
3. Specify Simulator Mode Settings	
4. Specify Simulator Options	
Session 16: Simulate the Design	
Session 17: Analyze the Simulation Results	
1. View the Simulation Waveform Section	
2. Create a Time Bar	106

Programming	108
Session 18: Program an Altera Device	
1. Open the Programmer Window	
2. Set Up a Passive Serial Chain	
3. Configure the Device	
4. Change Programming Modes	
5. Add a Device to a Chain	
Contacting Altera	114
Technical Support	
Product Information	

## **Tutorial Overview**

This tutorial introduces you to the basic features of the Quartus<sup>™</sup> programmable logic development system. It shows you how to create and process your own logic designs quickly and easily.

The sessions in this tutorial show you how to create and process a finite impulse response (FIR) filter design, called fir\_filter. You will create several design files using text and graphic design entry. This tutorial describes a "top-down" hierarchical design method, in which you create a top-level block diagram first, and then create the lower-level designs. You will then compile all project files, specify timing requirements, and view timing analysis results. You will also perform a timing simulation and analyze the results. Finally, you will download the design into an Altera® APEX™ device.

The fir\_filter tutorial is designed to help you learn how to use the Quartus software quickly. The tutorial is modular, so you can complete the sessions at your own pace; you can work through one session at a time, or complete the whole tutorial in one sitting. The tutorial is divided into the following five sections:

- "Design Entry" on page 8 teaches you how to create a top-level Block Design File (.bdf) using the Block Editor. You will also create several lower-level Verilog Design Files (.v) using the Text Editor and the MegaWizard™ Plug-In Manager.
- "Compilation" on page 51 teaches you how to compile a design using Compiler settings to control compilation processing. You will also learn to view the floorplan that shows how the Compiler placed logic in the device, and how to make location assignments.
- "Timing Analysis" on page 72 teaches you how to analyze the timing performance of logic in a design, including how to perform multiclock timing analysis.
- "Simulation" on page 92 teaches you how to create a Vector Waveform File (.vwf) that contains input vectors for timing simulation. You will also learn how to create Simulator settings to control simulation processing before performing a timing simulation.
- "Programming" on page 108 teaches you how to use the Quartus Programmer to configure an Altera device.

#### **Tutorial Files**

The Quartus installation process copies all tutorial files to your hard disk, and creates the following directories at the same level as the quartus directory:

\qdesigns \quad Quartus work directory.
\qdesigns\tutorial \quad Contains all files for this tutorial. This directory includes a readme.txt file that describes any changes to the tutorial since this manual was printed.
\qdesigns\fir\_filter \quad Directory in which you should create the fir\_filter project. Use this directory to prevent accidental changes to the original design files in the \qdesigns\tutorial directory.



On a UNIX workstation, the **qdesigns** directory is a subdirectory of the /**usr** directory.

#### **Command Shortcuts**

Many Quartus commands have a variety of shortcuts. However, this tutorial focuses on the primary commands, and does not cover all of the shortcuts. For information on available mouse, keyboard, toolbar, and tool palette shortcuts, refer to Quartus menus, the Toolbars command (Tools menu), and Quartus online Help.

## **Getting Help**

Throughout the tutorial, you can follow the footprints ( ) for useful references to Quartus Help. Online Help provides the most up-to-date and complete information on all Quartus features. Two of the easiest ways to get online Help are by using the context-sensitive Help feature, and the search index. You can also access Help by using the contents list or full-text search feature.

## **Context-Sensitive Help**

Context-sensitive Help gives you instant help when you need it. You can access context-sensitive Help in these ways:

Method:	Description:	
Shift+F1 keys	Press Shift+F1, point to an item on the screen, a text file keyword, or a menu command, and then click the left mouse button to obtain help.	
F1 key	When a menu command is highlighted, a dialog box is open, or a pop-up message box is displayed, press F1 to obtain help. You can also press F1 when any Quartus application window is displayed to obtain general information about the context-sensitive Help available for that application.	
Help command	When you want help on a message displayed in the Messages window, select the message and choose <b>Help</b> (right button pop-up menu).	

### **Help Search Index**


Quartus Help includes an extensive index to help you find information quickly. To search for a Help topic, follow these steps:

1. In the Quartus window, choose Index (Help menu).

01

If the Quartus Help window is already open, click the Index tab.

2. In the **Type in the keyword to find** box, type a keyword or phrase. The keyword list scrolls to display the keywords that match the text you type, as shown in the following illustration:

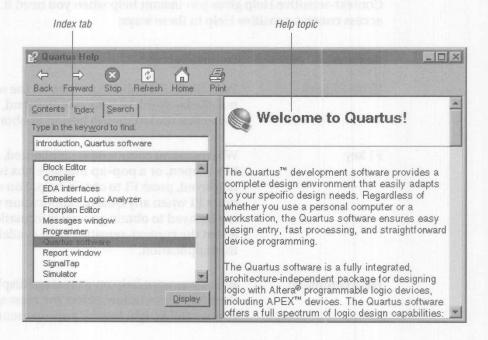

3. To display a topic, select a topic name and click **Display** or double-click a topic name.

## Help Contents


Quartus Help includes a Contents list, to help you locate information by category. To use the Contents list, follow these steps:

1. In the Quartus window, choose **Contents** (Help menu).

or

If the Quartus Help window is already open, click the Contents tab.

See the following illustration:

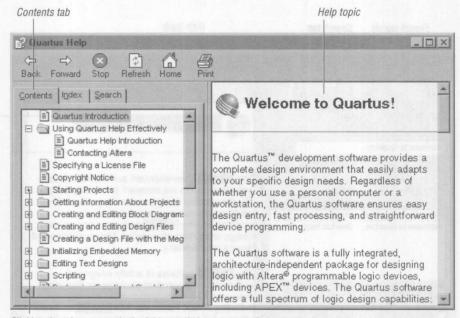

Clicking the + icon expands the folder so that you can see its contents.

- 2. Click the + icon to expand the folder you want to open.
- 3. To display a topic, click the topic name.

### Help Full-Text Search


Quartus Help includes a full-text search to help you find the Help topics that contain the text you specify. To use the full-text search, follow these steps:

1. In the Quartus window, choose Search (Help menu).

or

If the Quartus Help window is already open, click the Search tab.

See the following illustration:

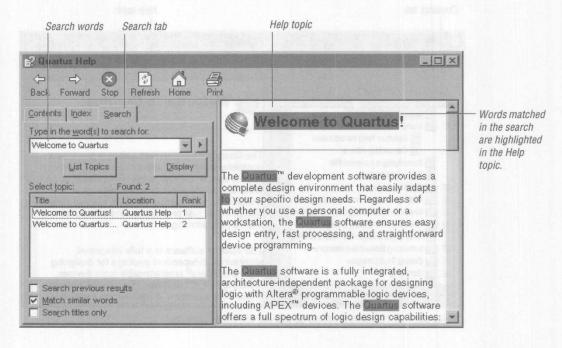

- 2. In the **Type in the word(s) to search for** box, type the word(s) that you want to search for in Help.
- 3. To broaden or narrow a search, turn on one or more of the following options:
  - To limit a search to Help topics found in a previous search, turn on Search previous results.
  - To search for similar words, turn on Match similar words.

- To limit the search to Help topic titles only, turn on Search titles only.
- 4. To begin a search, click **List Topics**. The titles of the Help topics that match the search criteria appear in the **Select topic** list.
- 5. To display a topic, select a topic name and click **Display** or double-click a topic name.

## **Design Entry**

In the Quartus software, a "project" consists of the complete set of design files, assignment files, simulation files, system settings, and hierarchy information for a design. The project you create in this tutorial demonstrates top-down design methodology. The following five tutorial sessions guide you through the steps needed to create the fir\_filter tutorial project, and then explain how to create a top-level Block Design File (.bdf) that contains blocks representing the lower-level design files. Next, you create the lower-level Verilog Design Files (.v) that these blocks represent. You complete the design entry sessions by creating a custom megafunction variation that is instantiated by one of the lower-level design files.

## **Session 1: Start the Quartus Software**

In this session, you will start the Quartus software to begin creating your project.



This tutorial assumes that the Quartus working directory, which has the default name **qdesigns**, appears on the **d**: drive on your computer. If you installed the Quartus working directory in a different drive and/or directory, substitute the appropriate drive and/or directory name.


To start the Quartus software, follow these steps:

1. Choose Programs > Altera > Quartus 1999.10 (Windows Start menu).

or

Type quartus ← at the command prompt. The Quartus window opens.

See the following illustration:

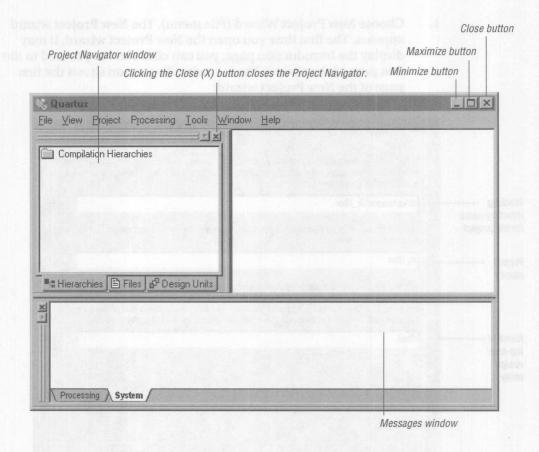


2. Maximize the Quartus window by clicking the **Maximize** button, as shown in the previous illustration.

## **Session 2: Create a Project**


The Quartus software offers a **New Project** wizard to help you create a new project. To create a project using the **New Project** wizard, follow these steps:

1. Choose New Project Wizard (File menu). The New Project wizard appears. The first time you open the New Project wizard, it may display the Introduction page; you can click Next to proceed to the first page of the wizard. The following illustration shows the first page of the New Project wizard:

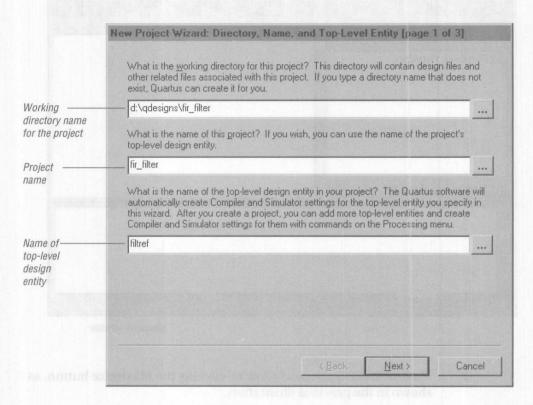


- 2. Type the directory name in the working directory box, or select the directory with Browse (...). For this example, type d: \qdesigns\fir\_filter or browse to select it.
- 3. Type a name for the project in the project name box. For this example, type fir\_filter.
- 4. Type filtref as the name of the top-level design entity of the project in the top-level design entity box.
  - By default, the project name you enter appears as the name of the top-level design entity. However, you can use a different top-level design entity name, as this step directs you to do.


5. Click **Next**. The second page of the **New Project** wizard appears, as shown in the following illustration:

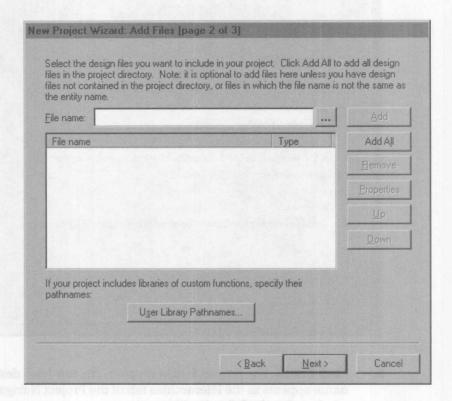

- 6. To add all of the design files in the project directory to the project, click **Add All**. Because **fir\_filter** is a new project, the list is empty.
  - If you are creating a project for which design files or other source files already exist, you can also use **Browse** (...) to select the files, and then click **Add** to add them to the project.
- 7. Click Next. The Summary page appears. The Summary page displays the project settings you specified in the wizard, such as the working directory, the name of the project, the top-level design entity, and the number of files in the project, as well as information about user libraries, EDA tools, and the device assignment. See the following illustration:

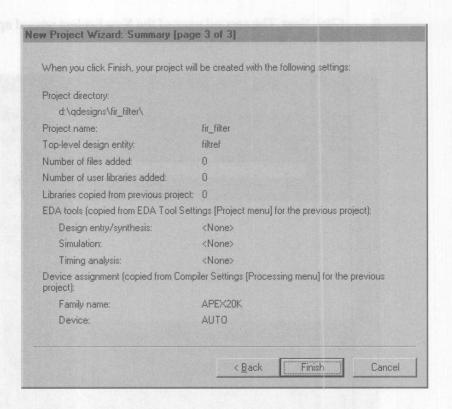

8. Click **Finish**. The project is now created. The top-level design entity name appears in the **Hierarchies** tab of the Project Navigator window. See the following illustration:

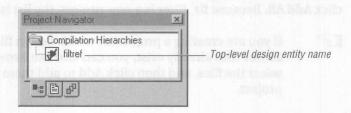

## Session 3: Create a Block Diagram

This session describes how to create a block diagram as the top-level design entity in the project. You will start by creating the top-level design entity, **filtref.bdf**.



If you are already familiar with design entry using the Quartus Block Editor, you can significantly reduce the time required to complete this tutorial by copying the following Altera-provided files from the \quad \quad \quad \text{qdesigns}\tutorial \text{ subdirectory into the \quad \quad \quad \quad \text{qdesigns}\fir\_filter \text{subdirectory:}

File Name:

Description:

Top-level Block Design File.

Top-level Block Design File.

Custom Verilog HDL variation of the lpm\_mult megafunction created with the MegaWizard Plug-In Manager. This file is represented in the filtref.bdf schematic as mult.

Altera recommends that you copy tutorial files by opening them in the Quartus software with the **Open** command (File menu), choosing **Save** As (File menu), turning on **Add file to current project**, and then saving the file to the **\qdesigns\fir\_filter** subdirectory. Once you have copied the Alteraprovided files, you can skip to "Session 4: Create Verilog Design Files" on page 43.

This session includes the following steps:

- 1. Create a new Block Design File (.bdf).
- 2. Create a block.
- 3. Enter primitive and megafunction symbols.
- 4. Change the Block Editor display options.
- 5. Enter input and output pin symbols.
- 6. Name the pins.
- 7. Connect symbols and blocks.
- 8. Map signals between blocks.

### 1. Create a New Block Design File

In this step you will create a new Block Design File (.bdf) called filtref.bdf. This file is the top-level design entity of the fir\_filter project.


To create a new BDF, follow these steps:

- 1. Choose New (File menu). The Design Files tab appears automatically.
- 2. In the Design Files tab, select Block Diagram/Schematic File.
- 3. Click **OK**. A new Block Editor window opens.
- 4. Choose **Save As** (File menu).
- 5. Select the folder where you want to save the BDF. The **Save As** dialog box should automatically display the project directory name, **d:\qdesigns\fir\_filter**, as the directory for saving the file.
- 6. In the File name box, type filtref as the name, if necessary.
- 7. If necessary, turn on Add file to current project.
- 8. Click Save. The file is saved and added to the project.


#### 2. Create a Block

Follow these steps to create a new block in the filtref.bdf file:


1. In the Block Editor window, click the **Block Tool** button on the Block Editor toolbar. The Block Editor window has the following default toolbar buttons:

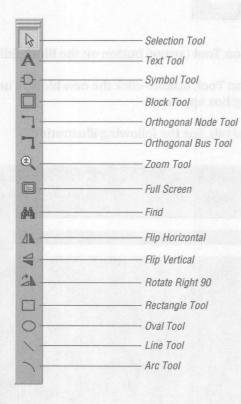


2. Click in a blank space in the Block Editor and drag the Block Tool pointer until the block is the size you want.

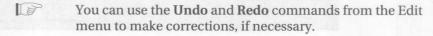

See the following illustration:

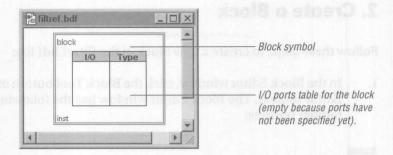


- 3. Click the Selection Tool (arrow) button on the Block Editor toolbar.
- 4. With the Selection Tool, double-click the new block. The **Block Properties** dialog box appears.
- 5. Click the **General** tab. See the following illustration:

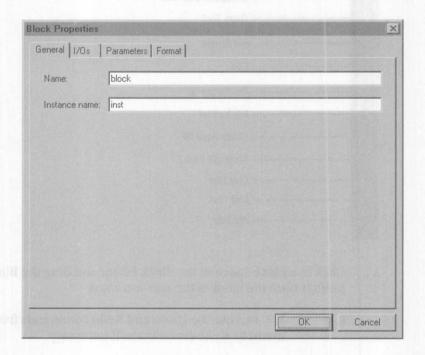

- 6. In the Name box, type taps as the block name, and keep the default instance name, inst.
- 7. Click the I/Os tab.


- 8. Under I/O, type clk in the Name box as the first port name, and in the Type list, select INPUT.
  - 9. Click Add. The clk port name appears in the Existing block I/Os list, as shown in the following illustration:

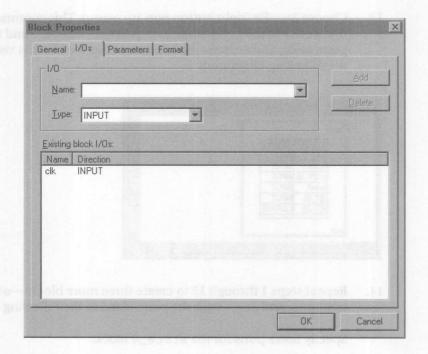

- 10. Repeat steps 8 and 9 to enter each of the port names shown in the following table:
  - You can type in all of the input port names at once, separating each name by a comma, and then click **Add**.

Name:	Type:
clk (already entered)	INPUT
reset	INPUT
sel[10]	INPUT
newt	INPUT
d[70]	INPUT
x[70]	OUTPUT

- 11. Click **OK**. You have now specified the input and output ports of the taps block. In session 4, you will learn how to create the design file that the taps block represents.
  - 12. Select the taps block.
  - 13. Choose AutoFit (right button pop-up menu). This command resizes the border of the taps block to fit proportionally around the I/O ports table, and ensures that all data about the block is visible. See the following illustration:

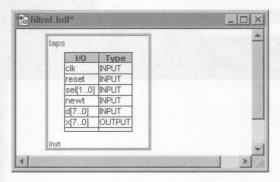

14. Repeat steps 1 through 13 to create three more blocks—state\_m, hvalues, and acc—with the ports listed in the following tables.

Specify these ports for the state\_m block:

Name:	Type:
clk	INPUT
reset	INPUT
newt	INPUT
sel[10]	OUTPUT
next	OUTPUT
first	OUTPUT


Specify these ports for the hvalues block:

Name:	Type:	
sel[10]	INPUT	
h[20]	OUTPUT	

Specify these ports for the acc block:

Name:	Type:
xh[100]	INPUT
clk	INPUT
first	INPUT
yn[70]	OUTPUT

15. To move any of the blocks to a new location, click the **Selection Tool** button on the Block Editor toolbar or press Esc to activate the Selection Tool, and then drag the block to a new location. When you have finished, the four blocks should appear roughly as shown in the following illustration:

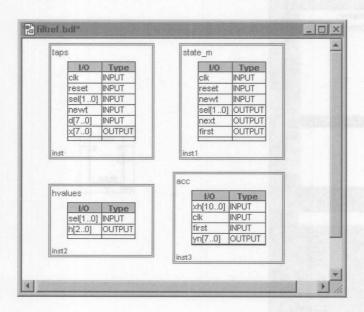


16. Choose Save (File menu).

### 3. Enter Primitive & Megafunction Symbols

A Block Design File (.bdf) can contain both blocks, like those you have already created in this tutorial, and "ordinary" schematic symbols. The Quartus software provides symbols for a variety of logic functions—including primitives, Library of Parameterized Modules (LPM) functions, and other megafunctions—that you can use in the Block Editor.

Follow these steps to enter a DFF (D flipflop) symbol in the **filtref.bdf** file:

- 1. Double-click in empty space in the Block Editor window.
- 2. In the **Symbol** dialog box, in the **Libraries** list, click the + icon to expand the **d:\quartus\libraries** folder. Similarly, expand the **primitives** folder, and then expand the **storage** folder.
- 3. In the storage **folder**, select the **dff** primitive. A preview of the new symbol appears in the **Symbol** dialog box, as shown in the following illustration:

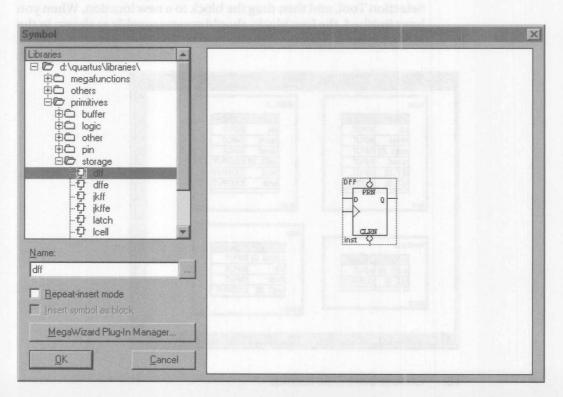

21




As an alternative to steps 2 and 3, you can simply type dff in the Name box.

- 4. Click **OK**. An outline of the DFF symbol is now attached to the
  - 5. Click the pointer at the desired location in the Block Editor window to insert the DFF symbol into the design file.
- 6. Repeat steps 1 through 5 to enter a DFFE symbol in the **filtref.bdf** file.


The next symbol you need to enter is a multiplier that is a variation of the lpm\_mult megafunction. You can use the MegaWizard Plug-In Manager to enter this symbol. The MegaWizard Plug-In Manager allows you to create (or modify) design files that contain custom variations of megafunctions. These custom megafunction variations are based on Altera-provided megafunctions, including Library of Parameterized Modules (LPM) functions. The MegaWizard Plug-In Manager runs a wizard that helps you specify options for customization easily. The wizard prompts you about the values you want to set for parameters and which optional ports you want to use. Once the wizard generates the multiplier variation, you can instantiate it in the design file.

> To enter a mult symbol generated by the MegaWizard Plug-In Manager, follow these steps:

- 1. Double-click an empty space in the Block Editor window.
- 2. In the Symbol dialog box, click MegaWizard Plug-In Manager. The first page of the MegaWizard Plug-In Manager is displayed, as shown in the following illustration:

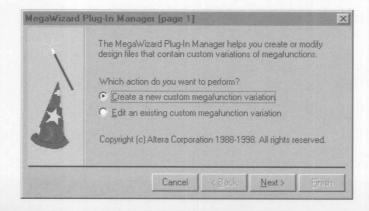

- 3. When you are asked **Which action do you want to perform?**, select **Create a new custom megafunction variation** and click **Next**.
  - 4. In the **Available Megafunctions** list, click the + icon to expand the **arithmetic** folder, then select **LPM\_MULT**.
- 5. When you are asked Which type of output file do you want to create?, select Verilog HDL.
- 6. When you are asked **What name do you want for the output file?**, specify **d:\qdesigns\fir\_filter\mult.v** and click **Next**.
- 7. When you are asked How wide should the 'dataa' input bus be?, select 8.
  - 8. When you are asked **How wide should the 'datab' input bus be?**, select 3.
- 9. To accept the defaults for the remaining questions and generate the symbol, click **Finish**. A preview of the new symbol appears in the **Symbol** dialog box.
  - 10. Click **OK**. An outline of the mult symbol is attached to the pointer.
  - 11. To place the symbol, click an empty space in the Block Editor window.
  - 12. Choose Save (File menu).

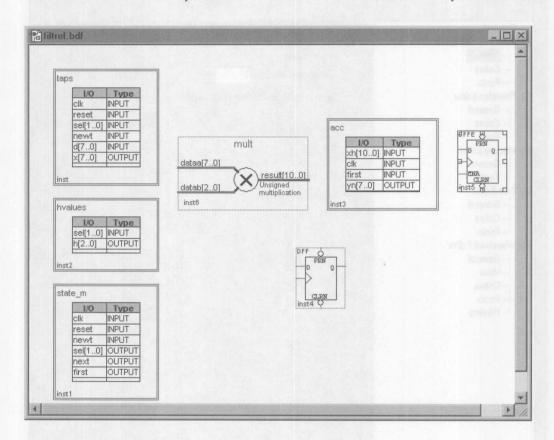


The following illustration shows the correct arrangement of the four block symbols as well as the DFF, DFFE, and mult symbols:

## 4. Change the Block Editor Display Options

You can change the Block Editor display options, as needed. To change the Block Editor display options, follow these steps:

- 1. Choose **Options** (Tools menu).
- 2. In the Category list, under Block/Symbol Editor, select General. See the following illustration:

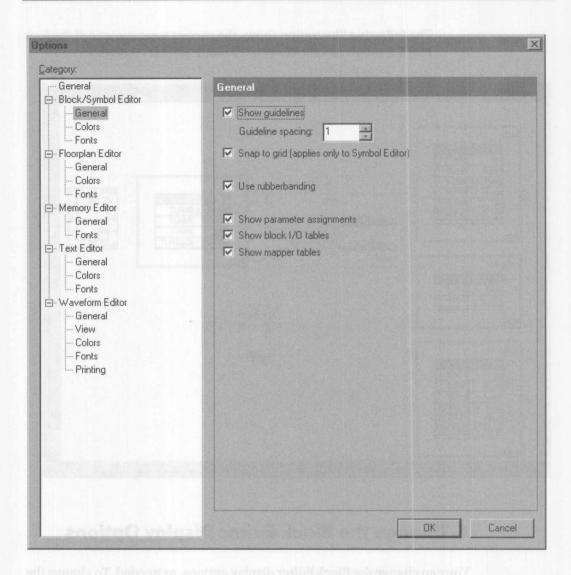


- 3. In the **General** tab, turn appropriate settings on or off, according to your preferences.
- 4. To modify the colors and fonts used in the Block Editor window, in the Category list, select Colors or Fonts.
- 5. Click OK.

You can also view larger or smaller portions of the file with the Zoom Tool, which is available by clicking the **Zoom Tool** button on the Block Editor toolbar, and with the **Zoom, Zoom In, Zoom Out**, and **Fit in Window** commands from the View menu.

## 5. Enter Input & Output Pin Symbols

To enter input and output pins, follow these steps:

- 1. Click the **Symbol Tool** button on the Block Editor toolbar. The same **Symbol** dialog box that you used to enter the DFF and DFFE symbols appears. Note, however, that using the toolbar button opens this dialog box with the **Repeat-insert mode** option turned on.
  - When Repeat-insert mode is turned on, an outline of the selected symbol remains attached to the pointer, regardless of how many times you click the mouse pointer, allowing you to place multiple copies of the symbol easily. Whenever you want to stop placing copies of a symbol, you can press Esc or choose Cancel (right button pop-up menu).
- 2. In the **Symbol** dialog box, in the **Libraries** list, click the + icon to expand the **d:\quartus\libraries** folder, expand the **primitives** folder, and then expand the **pin** folder.
- 3. In the **pin** folder, select the **input** primitive.
- 4. Click OK.
- 5. Click in empty space five times to insert a total of five INPUT symbols on the left-hand side of the file. Symbols are automatically named as pin\_name<number> in sequence. Press Esc.
- 6. Repeat steps 1 to 5 to insert and position a total of three OUTPUT symbols on the right-hand side of the file. See the following illustration:

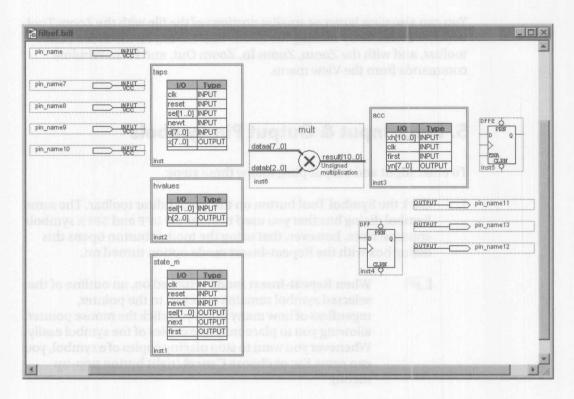


7. Choose Save (File menu).

#### 6. Name the Pins

You will now name the input and output pins. To name a pin, follow these steps:

1. With the Selection Tool, double-click the first input pin symbol you entered. The **General** tab of the **Pin Properties** dialog box appears automatically. See the following illustration:

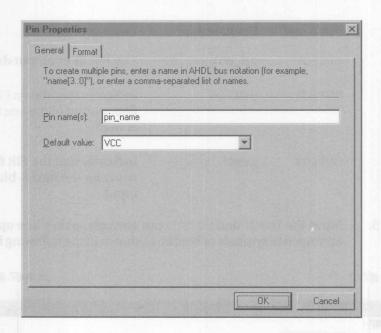


- 2. In the Pin name(s) box, type clkx2 to replace the default name of the first pin, that is, to replace pin\_name.
- 3. Click OK.
- 4. Repeat steps 1 to 3 to rename each of the pins with the following names:

Pin Type:	Rename As:	Description:
INPUT	clkx2 (already entered)	Derived clock for the FIR filter.
INPUT	clk	Base clock for FIR filter.
INPUT	d[70]	Data input to the FIR filter.
INPUT	reset	Reset signal for the FIR filter.
INPUT	newt	Input signal that loads the data input d[70] into the taps function.

Pin Type:	Rename As:	Description:
OUTPUT	yn_out[70]	The FIR filter output data.
OUTPUT	yvalid	Indicates that the yn[70] filter output of the acc function is valid.
OUTPUT	next	Indicates that the FIR filter is ready for the next 8-bit data input.

5. Move the INPUT and OUTPUT pin symbols so they line up with the appropriate symbols or blocks, as shown in the following illustration:

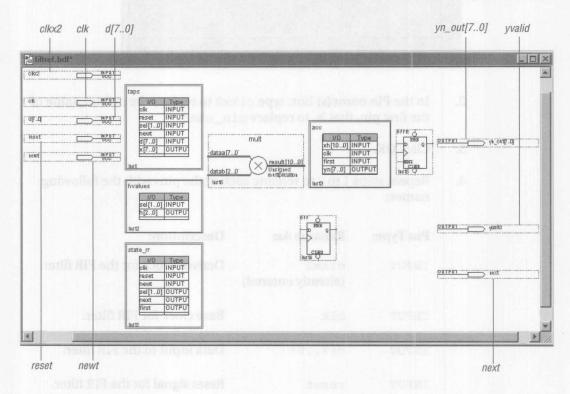

6. Choose **Save** (File menu).

## 7. Connect Symbols & Blocks

You can use the "smart" Selection Tool to draw most of the lines you need to connect symbols and blocks in a BDF. The lines that you draw to connect symbols include nodes, buses, and "conduits." Conduits are bus lines that represent one or more signals traveling to or from a block.

The "smart" Selection Tool pointer automatically turns into an appropriate line-drawing pointer when it is over a symbol pinstub or a block border. For example, it turns into the Orthogonal Node Tool pointer when you point it at a symbol pinstub, and turns into the Orthogonal Bus Tool pointer when you point it at a block border. You can also draw lines of a particular type with the Orthogonal Node Tool and Orthogonal Bus Tool.

The Quartus software makes connections automatically between blocks that have been connected together, or between the signals on a bus and the names of I/Os in blocks, so the bus acts as a conduit for any number of signals. Go to "8. Map Signals between Blocks" on page 35 for more information about conduits and about mapping signals between blocks.

To draw a bus or conduit line, follow these steps:

- 1. Click the Orthogonal Bus Tool button on the Block Editor toolbar.
- 2. Click the pinstub of the clk input pin to define the start of the bus, and then drag the pointer to draw a line that connects to the border of the taps block. A "mapper" symbol appears automatically on the edge of the taps block where the bus connects to the block. A mapper allows you to map I/O port(s) in the block to signal(s) in the bus. Refer to "8. Map Signals between Blocks" on page 35 for more information about using block mappers.
- 3. Repeat steps 1 through 2 to make the additional connections between symbols and blocks shown in the following table. You can also refer to Figure 1 on page 34, or to the Altera-provided **filtref.bdf** file.



To draw a line that connects a node or bus to an existing node or bus, you can choose the **Orthogonal Node Tool** or **Orthogonal Bus Tool** button on the Block Editor toolbar (see step 1 on page 15 for an illustration of the toolbar buttons). When you draw a line that connects a node or bus to an existing node or bus, a connection "dot" appears.

**Draw Line From:** 

INPUT pin clk

taps block (already entered)

Bus connecting INPUT pin clk to taps block

state\_m block

INPUT pin d[7..0]

Bus connecting taps block to

state\_m block

INPUT pin reset

Bus connecting taps block to

state\_m block

INPUT pin newt

Bus connecting taps block to

state\_m block

state\_m block

OUTPUT pin next

Q output of DFFE primitive

OUTPUT pin yn\_out[7..0]

- Click the Selection Tool button on the Block Editor toolbar.
- Repeat step 2 to make the additional connections between symbols and blocks shown in the following table. You can also refer to Figure 1 on page 34, or to the Altera-provided filtref.bdf file.

Draw Line From:

taps block

hvalues block

Bus connecting taps state\_m block block to hvalues block

Bus connecting INPUT pin clk to taps block

acc block

state\_m block

acc block

taps block

dataa[7..0] input of mult symbol

Draw Line From: To:

hvalues block datab[2..0] input of mult symbol

result[10..0] output acc block of mult symbol

6. Click the Orthogonal Node Tool button on the Block Editor toolbar.

- 7. Draw a line from the  $\D$  input of the DFF symbol to the border of the state\_m block.
- 8. Repeat step 7 to create the additional conduit connections between blocks and symbols, as shown in the following table. You can also refer to Figure 1 on page 34, or to the Altera-provided **filtref.bdf** file.

Draw Conduit From: To:

state\_m block Dinput of the DFF symbol (already

entered)

acc block Dinput of the DFFE symbol

The connection from the state\_m block to the D input of the DFF symbol is considered to be a conduit, because it is connected to a block; however, because it contains a single signal, it is acceptable to draw this line with a thin orthogonal node line, rather than a thick bus line.

- 9. Select the bus (or conduit) that connects the INPUT pin clk to the taps block, and choose Properties (right button pop-up menu).
- 10. In the Conduit Properties dialog box, click the Signals tab.

**Conduit Properties** General Signals Font | Format Signal: Connections: Signal inst1 inst2 ■ clk clk. clk clk newt newt newt **→** d[7..0] **→** d[7..0] reset reset reset first first sel[1..0] sel[1..0] <<new>> Cancel OK

The **Connections** list shows the signal connections for the selected conduit. See the following illustration:

By default, the output signals appear in colors that are different from the input signal colors.

11. Verify that the signals are correct, and then click OK.

To draw a node line, follow these steps:

- 1. Click the **Selection Tool** button on the Block Editor toolbar.
- 2. Draw a line from the pinstub of the Q output of the DFF symbol to the input pinstub of the OUTPUT pin yvalid.

3. Repeat steps 1 through 2 to make the additional connections between pins and primitives, as shown in the following table:

**Draw Line From:** 

To:

Q output of DFF primitive

OUTPUT pin yvalid (already

connected)

INPUT pin clkx2


clock input of DFFE primitive

node connecting the Q output of the DFF primitive to OUTPUT pin enable (ENA) input of the DFFE

primitive

yvalid

- To create a node that can be connected by name, draw a line from the clock input to the DFF symbol into an empty space. In "8. Map Signals between Blocks" on page 35, you will learn how to complete the connection by name for this node.
- 5. Choose Save (File menu).

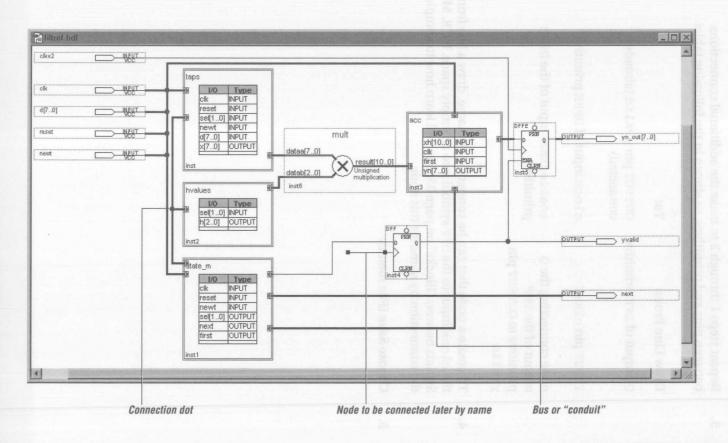

#### 8. Map Signals between Blocks

The Quartus software offers different ways to map signals between blocks and symbols:

#### Mapping Method:

#### Description:

"Smart" mapping

If the I/O signal names in one block are the same as in another block, the common I/Os between the blocks are connected automatically. You do not need to label these buses or conduits. To prevent an automatic mapping, you can specify that a particular block's I/O port should be mapped to "nothing."

Assigning names to nodes or buses (including "connection by name") If the I/O names are different between the blocks or symbols you want to connect, you can assign a name to the conduit that matches the name of one of the block's I/O ports to establish a mapping between that port and the bus or conduit.

Assigning a name is especially useful if you want to connect a conduit to another conduit, even though those conduits are not physically connected. To create a mapping between these conduits and their blocks, you must first make sure that each conduit is connected to a block on one end, but is physically unconnected to any other block or symbol. If you then assign matching names to both conduits (assuming that those names also match I/O ports in the connected blocks), you can establish a "connection by name" between the two conduits and their blocks. You can also use a similar method to connect two nodes by name.

Using "mappers" to specify mappings explicitly

If the I/O names are different in the blocks you want to connect, and the blocks are physically connected, you can specify the mappings explicitly. You can map the block I/O name to a signal on the bus and map that signal to the block I/O name you want to connect.

This section explains which signals are connected automatically through "smart" mapping, and shows how to map a total of six signals that are not mapped automatically. This section also shows how to assign appropriate names to two signals in order to establish connections, and how to specify explicit mappings for four other signals.


In the **filtref.bdf** design, the following connections make use of "smart" block mapping—you do not need to name these connections:

From:	To:
INPUT pin clk	Block I/Os named clk in blocks that are connected to the clk pin
INPUT pins d[70]	Block I/Os named d[70] in the taps block
INPUT <b>pin</b> reset	Block I/Os named reset in the taps and state_m blocks
INPUT <b>pin</b> newt	Block I/Os named newt in the taps and state_m blocks
Block I/O named sel[10] in the taps block	Block I/Os named sel[10] in the hvalues and state_m blocks
Block I/O named first in the state_m block	Block I/Os named first in the acc block
Block I/O named next in state_m block	OUTPUT <b>pin</b> next

To assign appropriate names to some of the signals so they can be logically connected, follow these steps:

- 1. With the Selection Tool, select the conduit that connects the state\_m block to the D input of the DFF primitive.
- 2. Choose Properties (right button pop-up menu).
  - 3. In the Conduit Properties dialog box, if necessary, click the General tab.

4. In the **Conduit name** box, type next as the name of the conduit. See the following illustration:

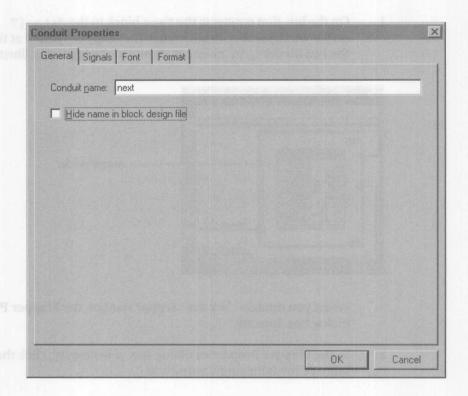


- 5. Click **OK**. The signal next is added automatically to the conduit, and the name appears above the conduit line. Adding this name creates a logical connection between the state\_m block and the D input of the DFF primitive.
- 6. Follow steps 1 through 5 to name the node that feeds the Clock input of the DFF primitive. Name the node clk, so that you can create a logical connection, or a "connection by name," from the INPUT pin clk to the Clock input of the DFF primitive.
- 7. Choose Save (File menu).

You must map four other connections explicitly so that the Quartus software can properly connect the mult symbol to other blocks in the file.


To map other connections between I/O signals in blocks to differently-named I/O signals in other blocks, follow these steps:

1. On the bus that connects the taps block to the dataa [7..0] input on the mult symbol, double-click the mapper symbol at the end of the bus on the taps block, as shown in the following illustration:

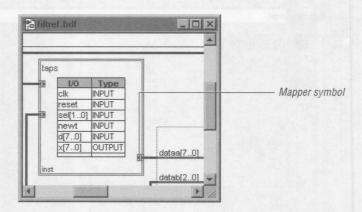


When you double-click the mapper symbol, the **Mapper Properties** dialog box appears.


2. In the **Mapper Properties** dialog box, if necessary, click the **General** tab. See the following illustration:

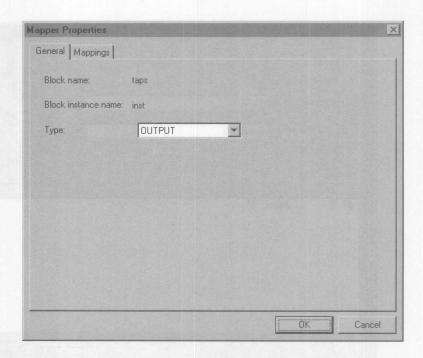

- 3. In the **Type** list, select **OUTPUT**.
- 4. Click the **Mappings** tab.
- 5. In the I/O on block list, select x[7..0].
- 6. In the Signals in conduit box, type dataa[7..0].
- 7. To map the connection, click **Add**. The mapping appears in the **Existing mappings** list, as shown in the following illustration:

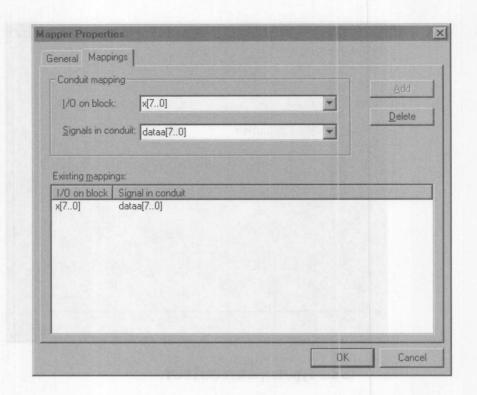

8. Click OK. The signal dataa[7..0] is added to the bus, and a mapper table appears that shows the mapping information. This mapping is necessary to indicate which signals should feed the dataa[7..0] input port of the mult symbol. See the following illustration:

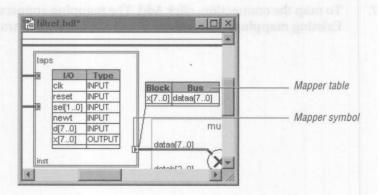


9. Repeat steps 1 through 8 to create the following mappings. You can also refer to Figure 2 on page 42, or to the Altera-provided **filtref.bdf** file.

Connection:	Type:	I/O on Block:	Signals in Conduit:
Bus from the taps block to the dataa[70] input of the mult symbol (already entered)	OUTPUT	x[70]	dataa[70]
Bus from the hvalues block to the datab[20] input of the mult symbol	OUTPUT	h[20]	datab[20]
Bus from the result[100] output of the mult symbol to the acc block	INPUT	xh[100]	result[100]
Bus from the acc block to the D input of the DFFE primitive	BIDIR	yn[70]	yn[70]

10. Choose **Save** (File menu). The Block Design File is complete. See Figure 2 on page 42.

Figure 2. The Completed filtref.bdf Block Design File

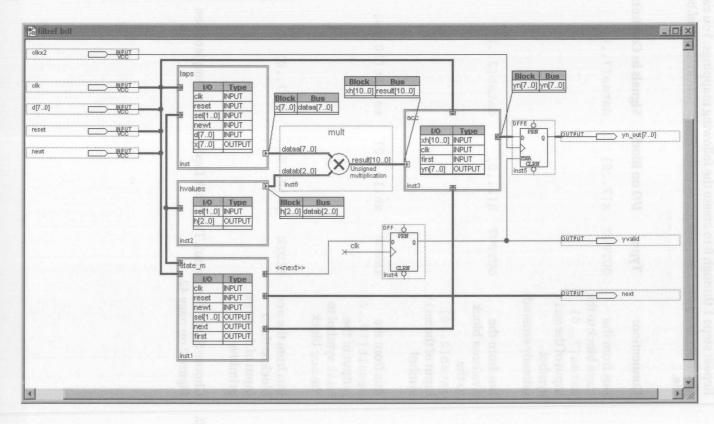

## **Session 4: Create Verilog Design Files**

Once you have created a block, you need to create the design file that the block represents, if it does not already exist. You can automatically create a design file that contains the basic framework for the block that represents it. You can then fill in the framework with the design details.



If you are already familiar with Verilog HDL design entry using the Quartus Text Editor, you can copy the Altera-provided hvalues.v, taps.v, state\_m.v, and acc.v files from the \qdesigns\tutorial subdirectory into the \qdesigns\fir\_filter subdirectory. Altera recommends that you copy tutorial files by opening them in the Quartus software with the Open command (File menu), choosing Save As (File menu), turning on Add file to current project, and then saving the file to the \qdesigns\fir\_filter subdirectory. If you copy the Altera-provided files, skip to "Session 5: Create a Design File with the MegaWizard Plug-In Manager" on page 47.


This session contains the following steps:

- 1. Create a Verilog Design File (.v) for the hvalues block.
- 2. Copy Verilog Design Files for other blocks.

## 1. Create a Verilog Design File for the hvalues Block

To create the framework of a Verilog Design File (.v) for the hvalues block, follow these steps:

- 1. Select the hvalues block.
- 2. Choose Create Design File (right button pop-up menu).
- 3. Under File type, select Verilog HDL.
- 4. Turn on Add the new design file to the current project.
- 5. Make sure that the **File name** box shows the **hvalues.v** file in the **fir\_filter** project directory. See the following illustration:

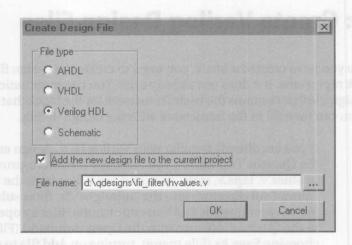

6. Click **OK**. The Quartus software confirms that the file has been generated successfully and automatically opens a Text Editor window that contains the new file.

The Quartus software generates the file that is shown in Figure 3 on page 45, which includes a template for a module declaration, with port declarations that correspond to the data you entered in the block:



You may notice a few pairs of Quartus-generated comments that start with "ALTERA" and end with "DO NOT REMOVE THIS LINE!" The information between these pairs of comments can be updated later by the Quartus software, so you must not enter text between them. However, you can enter other Verilog HDL statements outside of these commented sections.

#### Figure 3. Excerpt from the Quartus-Generated hvalues.v File

```
// Module Declaration
module hvalues
(
    // {{ALTERA_ARGS_BEGIN}} DO NOT REMOVE THIS LINE!
    sel, h
    // {{ALTERA_ARGS_END}} DO NOT REMOVE THIS LINE!
);

// Port Declaration

// {{ALTERA_IO_BEGIN}} DO NOT REMOVE THIS LINE!
    input [1:0] sel;
    output [2:0] h;
    // {{ALTERA_IO_END}} DO NOT REMOVE THIS LINE!
endmodule
```

7. Add the following lines to the hvalues.v file to implement the design. Insert these lines just before the endmodule statement:

```
reg [2:0]h;

always @(sel)

case (sel)

    2'b 00 : h = 3'b 111;
    2'b 01 : h = 3'b 101;
    2'b 10 : h = 3'b 011;
    2'b 11 : h = 3'b 001;

endcase
```

The **hvalues.v** file should now appear as shown in Figure 4 on page 46.

#### Figure 4. Excerpt from the Completed hvalues.v File

```
// Module Declaration
      module hvalues
         // {{ALTERA_ARGS_BEGIN}} DO NOT REMOVE THIS LINE!
         sel, h
         // {{ALTERA_ARGS_END}} DO NOT REMOVE THIS LINE!
      );
      // Port Declaration
         // {{ALTERA_IO_BEGIN}} DO NOT REMOVE THIS LINE!
         input [1:0] sel;
         output [2:0] h;
         // {{ALTERA_IO_END}} DO NOT REMOVE THIS LINE!
         reg [2:0]h;
      always @(sel)
case (sel)
     2'b 00 : h = 3'b 111;
           2'b 01 : h = 3'b 101;
          2'b 10 : h = 3'b 011;
          2'b 11 : h = 3'b 001;
      endcase
      endmodule
```

8. Choose Save (File menu).

### 2. Copy Verilog Design Files for Other Blocks

To copy Verilog Design Files for the taps,  ${\tt state\_m},$  and acc blocks:

Copy the taps.v, state\_m.v, and acc.v files that are provided in the \qdesigns\tutorial directory into the \qdesigns\fir\_filter directory. Altera recommends that you copy tutorial files by opening them in the Quartus software with the Open command (File menu), choosing Save As (File menu), turning on Add file to current project, and then saving the file to the \qdesigns\fir\_filter subdirectory.

# Session 5: Create a Design File with the MegaWizard Plug-In Manager

The design file acc.v requires a 12-bit adder function, which you can implement with a variation of the lpm\_add\_sub function. The acc.v file instantiates this function as accum. You can create this custom variation with the MegaWizard Plug-In Manager. For additional information about the MegaWizard Plug-In Manager, refer to "3. Enter Primitive & Megafunction Symbols" on page 20.



If you are already familiar with using the Megawizard Plug-In Manager, you can copy the following Altera-provided files from the \qdesigns\tutorial directory into the \qdesigns\fir\_filter directory. Altera recommends that you copy tutorial files by opening them in the Quartus software with the Open command (File menu), choosing Save As (File menu), turning on Add file to current project, and then saving the file to the \qdesigns\ fir\_filter subdirectory. If you copy the Altera-provided files, skip to "Compilation" on page 51.

File Name:	Description:
accum.v	Custom Verilog HDL variation of the lpm_add_sub function created with the MegaWizard Plug-In Manager.
accum.inc	An ASCII text file, generated automatically by the MegaWizard Plug-In Manager, used by the Compiler to declare Verilog HDL port name and order information.


This session includes the following steps:

- 1. Create a Verilog HDL variation of a megafunction.
- 2. Add wizard-generated files to the project.

## 1. Create a Verilog HDL Variation of a Megafunction

To create a custom Verilog HDL version of the <code>lpm\_add\_sub</code> function with the MegaWizard Plug-In Manager, follow these steps:

1. Choose MegaWizard Plug-In Manager (Tools menu). The MegaWizard Plug-In Manager appears. See the following illustration:

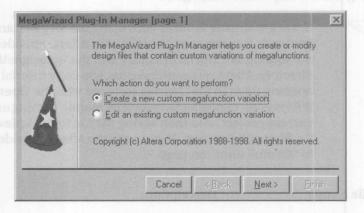


- 2. When you are asked Which action do you want to perform?, select Create a new custom megafunction variation and click Next.
- 3. In the Available Megafunctions list, click the + icon to expand the arithmetic folder, and then select LPM\_ADD\_SUB.
- 4. When you are asked Which type of output file do you want to create?, select Verilog HDL.
- 5. When you are asked What name do you want for the output file?, specify d:\qdesigns\fir\_filter\accum.v and click Next.
- 6. When you are asked How wide should the 'dataa' & 'datab' input buses be?, select 8.
- 7. When you are asked Which operating mode do you want for the adder/subtractor?, select Addition only and click Next.

- 8. When you are asked Is the 'dataa' or 'datab' bus value a constant?, select No, both values vary and click Next.
- 9. When you are asked **Do you want any optional inputs or outputs?**, make sure all of the options are turned off and click **Next**.
- 10. When you are asked **Do you want to pipeline the function?**, select **No** and click **Next**. A Summary page appears, listing the files that the MegaWizard Plug-In Manager will create.
- 11. Click **Finish**. The wizard creates the **accum.v** file, and the file is ready to be imported into your project.

#### 2. Add Wizard-Generated Files to the Project

To add the accum.v and mult.v files to the fir\_filter project, follow these steps:

- 1. Choose Add Files to Project (Project menu). The Add Files tab appears automatically.
- 2. In the **File name** box, specify the **accum.v** file and, if necessary, the **mult.v** file. See the following illustration:

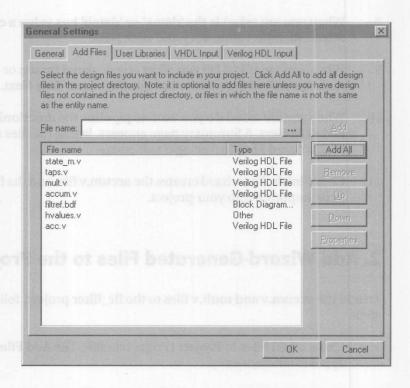

3. Click **OK**. You have now created and added all of the necessary design files for the **fir\_filter** project.

## Compilation

The Quartus Compiler consists of a series of modules that check the design for errors, synthesize the logic, fit the design into an Altera device, and generate output files for simulation, timing analysis, and device programming.

The Compiler first extracts information that defines the hierarchical connections between a project's design files and checks the designs for basic design entry errors. Then, it creates an organizational map of the design and combines all design files into a fully flattened database that can be processed efficiently.

You can instruct the Compiler to apply a variety of techniques, such as timing-driven compilation, to increase the speed of your design and optimize the device resource usage. The Compiler also creates programming files that the Quartus Programmer or another industry-standard programmer can use to program or configure an Altera device.

Both during and after compilation, you can view the results in the Compilation Report window. The following tutorial sessions guide you through the steps necessary to specify Compiler settings, compile the top-level design entity, view the fit in the Last Compilation floorplan, assign logic to an Embedded System Block (ESB), and recompile the design.

### **Session 6: Specify Compiler Settings**

The Quartus software allows you to compile an entire design, or to compile any constituent part of a design. The "compilation focus," which is the design entity you want to compile, can be selected from any portion of a project's hierarchy.

When you create a new project, the Quartus software creates default Compiler settings that specify the compilation focus, the type of compilation to perform, the device family and device to use, and other options.

You can also create your own customized Compiler settings to override the default settings. You can switch between different Compiler settings when you compile a design. This session includes the following steps:

- 1. View the Compiler general settings.
  - 2. Specify the device family and device.
  - 3. Specify the Compiler mode.
  - 4. Specify Compiler synthesis and fitting settings.
  - 5. Specify Compiler verification settings.
  - The procedures below explain how to view and edit Compiler settings using menu commands and dialog boxes. However, you can also easily specify all Compiler settings by following the steps in the Compiler Settings Wizard (Processing menu).


#### 1. View the Compiler General Settings

The **General** tab of the **Compiler Settings** dialog box allows you to select an existing group of Compiler settings for use during compilation, define and save a new group of Compiler settings, specify the compilation focus, or delete existing settings.

To view the default Compiler general settings created for the current project, follow these steps:

- 1. Make sure that you are in Compile mode by selecting **Compile Mode** (Processing menu).
- 2. Choose **Compiler Settings** (Processing menu). The **General** tab opens automatically.

At this point in the tutorial, the **General** tab displays only the default Compiler general settings created by the Quartus software when you used the **New Project** wizard to create the **fir\_filter** project. These default settings are given the name of the top-level design entity in the project, **filtref**. See the following illustration:

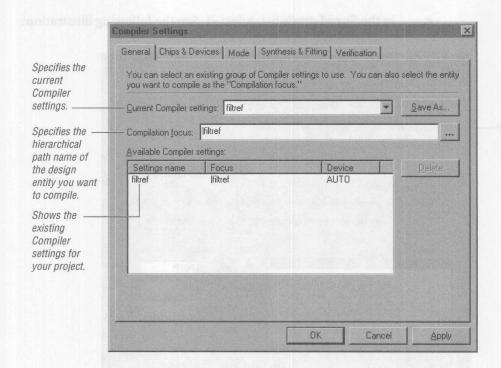


#### 2. Specify the Device Family & Device

The Chips & Devices tab of the Compiler Settings dialog box allows you to select the family and device you want to target for compilation.

To select the device family and device, follow these steps:

- 1. In the Compiler Settings dialog box, click the Chips & Devices tab.
- 2. In the Family list, select APEX20K.
- 3. Under Target device, select Specific device selected in "Available devices" list.
- 4. Under Show in "Available devices" list, select the following options:
  - a. In the **Package** list, select **PQFP**.
  - b. In the Pin count list, select 208.

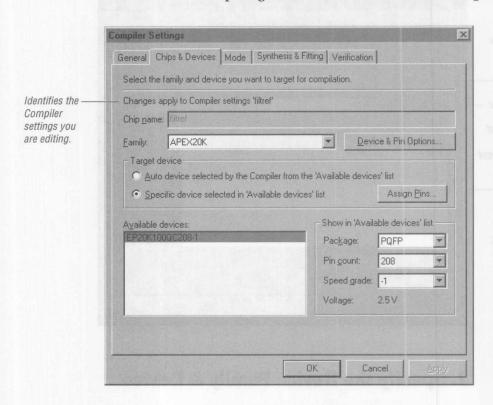

In the **Speed grade** list, select -1. See the following illustration:

- 5. In the Available devices list, select EP20K100QC208-1.
- 6. Click Apply.


#### 3. Specify the Compiler Mode

The **Mode** tab of the **Compiler Settings** dialog box allows you to specify options that affect the type of compilation, the compilation speed, and the amount of disk space used for compilation.

To specify the Compiler mode, follow these steps:

- 1. In the Compiler Settings dialog box, click the Mode tab.
- 2. Under Compilation level, select Full compilation.

- 3. To make future re-compilations run faster, under Compilation speed/disk usage tradeoff, select Smart compilation/more disk space.
  - 4. Make sure the Preserve fewer node names to save disk space option is turned on. See the following illustration:

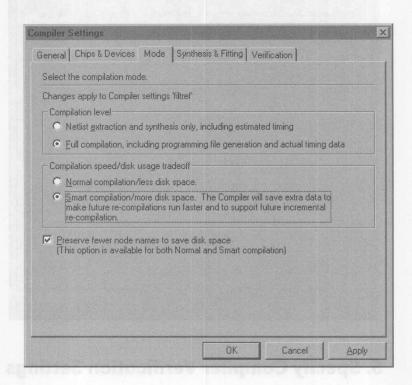


#### 4. Specify Compiler Synthesis & Fitting Settings

The **Synthesis & Fitting** tab of the **Compiler Settings** dialog box allows you to specify options that determine how a design is implemented in a device. You can turn on options in this dialog box to direct the Fitter to optimize the placement of logic in order to meet your timing goals.

To specify Compiler synthesis and fitting settings, follow these steps:

1. In the Compiler Settings dialog box, click the Synthesis & Fitting tab.

2. Make sure that **Optimize I/O timing** and **Optimize internal timing** are turned on. See the following illustration:

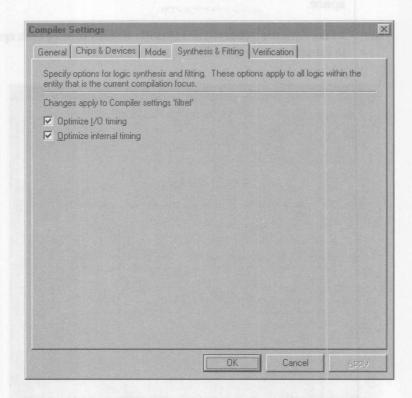


#### 5. Specify Compiler Verification Settings

The **Verification** tab of the **Compiler Settings** dialog box allows you to specify options for running automatic timing analyses and/or a batch simulation at the end of the compilation process.

To specify Compiler verification settings, follow these steps:

- 1. In the Compiler Settings dialog box, click the Verification tab.
- 2. Make sure that **Run timing analyses** is turned on. See the following illustration:

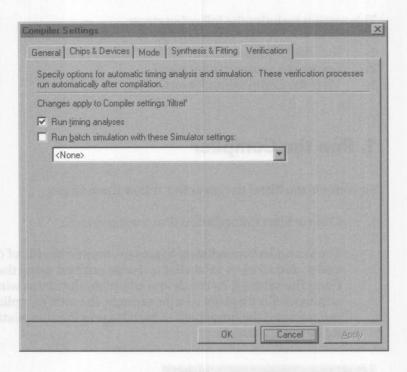

3. Click **OK**. All of the settings and options you specified are saved in the **filtref** Compiler settings. When you run the Compiler, these current Compiler settings apply.

## **Session 7: Compile the Design**

During compilation, the currently specified Compiler settings control design processing. The Compiler automatically locates and uses all non-design files associated with the current compilation focus, such as Include Files (.inc) containing AHDL Function Prototype Statements; Memory Initialization Files (.mif) or Hexadecimal Intel-format Files (.hex) containing the initial content of memories; and Project, Entity, and Compiler Settings Files (.psf, .esf, and .csf). During compilation, the Compiler generates information, warning, and error messages that appear automatically in the Messages window.

This session includes the following steps:


- 1. Run the Compiler.
- 2. Locate the source of a message.
- 3. View the Compilation Report.

#### 1. Run the Compiler

To compile the **filtref** design entity, follow these steps:

1. Choose Start Compilation (Processing menu).

The Compiler immediately begins to compile the **filtref** design entity, and all of its subordinate design entities, using the **filtref** Compiler settings. As the design compiles, the Status window automatically displays, as a percentage, the total compilation progress and the time spent in each stage of the compilation. See the following illustration:

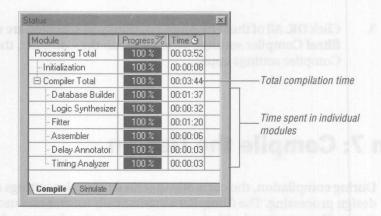

In addition, the results of the compilation are updated in the Compilation Report window.

The Compiler runs in the background, freeing your computer—and other portions of the Quartus software—for other work. However, the compilation of this design entity is short and you should not have to wait long for it to finish.


2. When you receive a message indicating that compilation was successful, click **OK**.

#### 2. Locate the Source of a Message

During compilation, all compilation messages appear in the **Processing** tab of the Messages window. Some messages that appear in the Messages window can be located in a design or other source file.

To locate the source of a Compiler-generated message, follow these steps:

In the Messages window, click the + icon to expand the d:\qdesigns\fir\_filter\acc.v defines information message. See the following illustration:

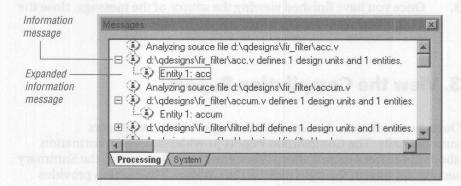

2. Double-click the Entity 1:acc expanded information message. The acc.v file, which contains the message source, appears in a Text Editor window, and the section that is the source of the message—the Module Declaration—is highlighted in the file. See the following illustration:

```
abo acc. v
                                                                             - 0 ×
                   24 // Module Declaration
Source of
message is
                           // {{ALTERA ARGS BEGIN}} DO NOT REMOVE THIS LINE!
highlighted
                         xh, clk, first, yn
// {{ALTERA_ARGS_END}} DO NOT REMOVE THIS LINE!
in the
original file.
                   31 // Port Declaration
                          // {{ALTERA_IO_BEGIN}} DO NOT REMOVE THIS LINE!
                   34 input [10:0] xh;
                      input clk;
                          input first
                          output [7:0] yn;
                        // {{ALTERA_IO_END}} DO NOT REMOVE THIS LINE!
                   40
                         reg [7:0]yn;
                   41 reg [11:0] ynm, inter, result, a_in;
```

3. Once you have finished viewing the source of the message, close the Text Editor window.


#### 3. View the Compilation Report

During compilation, the Compilation Report window appears automatically. The Compilation Report provides detailed information about the current compilation. When the report first opens, the Summary section appears in the right pane of the window. This section provides summary information about the compilation, including its final status; timing requirements, if any; the name of the design entity compiled; the total number of logic cells and pins used in the device; and the total amount of memory used.

The Compilation Report's other sections provide information about the design hierarchy revealed by the compilation; the floorplan showing how the Compiler placed logic in the device; pin and logic cell usage; global and control signal usage; device interconnect usage; operating frequency  $(f_{MAX})$ ; setup and hold time, and pin-to-pin timing; equations; processing time; etc.

To view any section of the Compilation Report, follow these steps:

1. In the left pane of the Compilation Report window, click the + icon to expand the appropriate Report window section. See the following illustration:

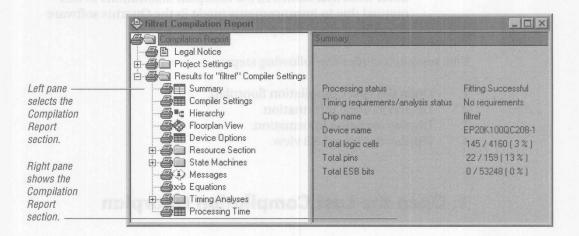

2. In the left pane of the Report window, select the Report section you want to open. The report appears in the right pane of the window.



Go to "Session 10: View Timing Analysis Results" on page 73 for more information about timing analysis results. Go to "Overview: Viewing the Results of a Compilation or Simulation in the Report Window" in Quartus Help for more information about the Report window.

# Session 8: View the Fit in the Last Compilation Floorplan

The Quartus software offers two views of a design's floorplan:

- The Current Assignments floorplan allows you to edit the location assignments of resources on the device.
- The non-editable Last Compilation floorplan shows how the Compiler implemented the design in a device.

Each of these floorplans allows you to view information organized by interior logic cells, interior logic array blocks (LABs), interior MegaLAB™ structures, and the device package top and bottom.



The actual placement and routing of logic in the device may differ from that shown in the floorplan illustrations in this manual due to improvements made in the Quartus software after this manual was printed.

This session includes the following steps:

- 1. Open the Last Compilation floorplan.
- 2. Display routing information.
- 3. Display equation information.
- 4. Display the MegaLAB view.

#### 1. Open the Last Compilation Floorplan

After a successful compilation, you can view the results in the Last Compilation floorplan. The Last Compilation floorplan shows how the Compiler implemented the logic of a design into an Altera device.


To open the Last Compilation floorplan, follow these steps:

- 1. Choose Open Last Compilation Floorplan (Processing menu).
- 2. To increase the size of the Floorplan Editor window, turn on Full Screen (View menu). By default, the Interior Logic Cell view of the Floorplan Editor appears, showing the individual logic cells in each LAB. Unused logic cells are shown in white. Used logic cells are color-coded to reflect the interconnect used in fitting.
- 3. To display the color legend, turn on Color Legend Window (View menu).

#### 2. Display Routing Information

To show node fan-in and fan-out, follow these steps:

- 1. Select Routing > Show Node Fan-In & Fan-Out (View menu).
- 2. In the first LAB (LAB1), select the seventh logic cell down (LC7). The fan-in to the logic cell is displayed in dark magenta; the fan-out is shown in dark cyan. The arrows on the fan-in and fan-out lines indicate the direction of flow for the signal. See the following illustration:

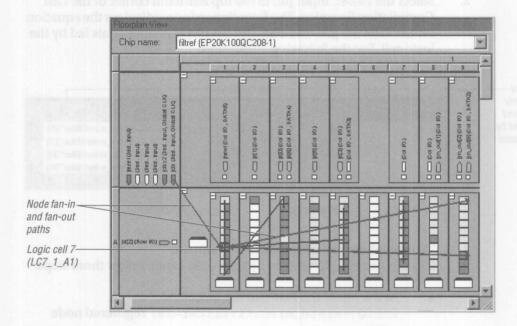


- 3. To display the routing delays, turn on **Routing > Show Routing Delays** (View menu). The routing delays associated with the selected logic cell appear in the floorplan alongside the fan-in and fan-out paths.
- 4. When you are finished viewing the fan-in and fan-out paths, select **Routing > Hide Routing** (View menu).

#### 3. Display Equation Information


The Equations window allows you to view the equations, fan-in, and fanout for a selected pin or cell. The Equations window appears automatically at the bottom of the Floorplan Editor window.

To view the equations for the reset input pin, follow these steps:

- 1. If necessary, to display the Equations window, turn on Equations (View menu).
  - 2. Select the reset input pin in the top left-hand corner of the Last Compilation floorplan. The Equations window displays the equation for the selected pin. The Fan-Out list displays the signals fed by the logic cell. See the following illustration:

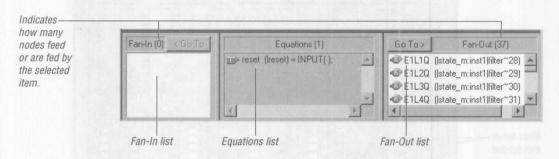

- 3. To expand the equation associated with the E1L1Q(|state\_m:inst1|filter~28) node, follow these steps:
  - a. At the top of the Fan-Out list, select the E1L1Q(|state\_m:inst1|filter~28) registered node name.
- b. Click **Go To** >. The equation for the register appears in the **Equations** list.
  - c. In the **Equations** list, click the first equation term highlighted in blue. The equation term expands to reveal the substituted equation, as shown in the following illustration:

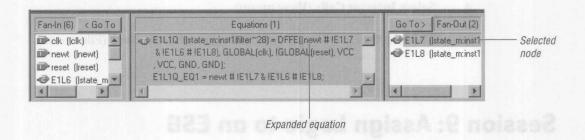


#### 4. Display the MegaLAB View

MegaLABs are large-scale structures within APEX  $20K^{\text{TM}}$  devices. Each MegaLAB contains 16 LABs, one ESB, and a MegaLAB Interconnect structure.

To display the MegaLABs of the device in the Floorplan Editor window, follow these steps:

1. Select Interior MegaLABs (View menu). The Floorplan Editor displays the MegaLABs in the device. Unused resources are shown in white, by default. Used resources are color-coded to reflect the interconnect used in fitting. See the following illustration:

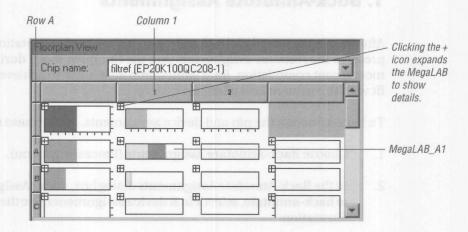

- 2. In column 1 row A, click the + icon to expand MegaLAB\_A1. The MegaLAB expands to show its individual LABs.
- 3. Turn off **Full Screen** (View menu).

- 4. Select Interior Cells (View menu).
- 5. To close the Last Compilation floorplan, choose Close (File menu).

### Session 9: Assign Logic to an ESB

You can use a technology mapping option to force the Quartus software to implement the logic of a design entity into ESBs. ESBs are structures within APEX 20K devices that can be used to implement memory (RAM or ROM), or to implement registered logic in the ESB's product term macrocells.

This session includes the following steps:


- 1. Back-annotate assignments.
- 2. Verify the back-annotated assignments.
- 3. Create a location assignment.
- 4. Recompile the design.
- 5. View the fit in the Last Compilation floorplan.

#### 1. Back-Annotate Assignments

After you have compiled the design, you can use back-annotation to preserve the resource assignments that the Compiler made during the most recent compilation. Back-annotation allows you to achieve the same fit with subsequent compilations.

To back-annotate the pin and device assignments, follow these steps:

- 1. Choose Back-Annotate Assignments (Processing menu).
- 2. In the Back-Annotate Assignments dialog box, under Assignment(s) to back-annotate, select Pin & device assignments. See the following illustration:

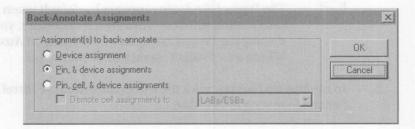

3. Click OK.

#### 2. Verify the Back-Annotated Assignments

You can verify that back-annotation preserved the last compilation assignments by viewing the Current Assignments floorplan.

To verify the assignments, follow these steps:

- 1. Choose Open Current Assignments Floorplan (Processing menu).
- 2. Turn on Full Screen (View menu). The Chip name list at the top of the Current Assignments floorplan displays the chip name and EP20K100QC208-1 device you specified, and the pin assignments from the last compilation are now shown in the Current Assignments floorplan. Because the back-annotation did not include logic cells, all logic cells are empty.
- 3. Turn off Full Screen (View menu).
- 4. To close the Floorplan Editor, choose **Close** (File menu).

#### 3. Create a Location Assignment


To assign the state\_m: inst1 design entity to an ESB product term, follow these steps:

1. In the Project Navigator, click the Hierarchies tab.




The Project Navigator appears by default when you start the Quartus software. However, if necessary, you can display the Project Navigator by turning on **Auxiliary Windows > Project Navigator** (View menu).

2. In the **Hierarchies** tab, click the + icon to expand the **filtref** hierarchy. See the following illustration:

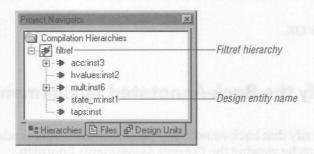

- 3. In the filtref hierarchy, select the state\_m:inst1 design entity name.
- 4. Choose Assignment Organizer (right button pop-up menu). The Assignment Organizer dialog box opens, with the Edit specific entity & node settings for option selected, and with the hierarchical path name of the state\_m:inst1 entity shown in the Name box.
- 5. In the Assignment Categories list, click the + icon to expand Options for Entities Only.
- 6. Click the Click here to add a new assignment text.
- 7. Under Assignment, in the Name list, select Technology Mapper.
- 8. In the **Setting** list, select **Product Term**. See the following illustration:

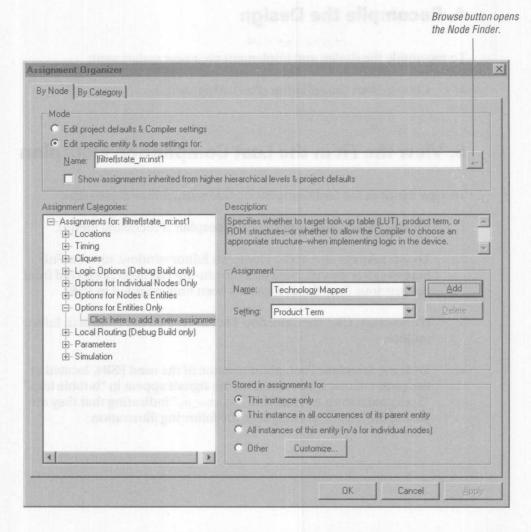

9. Click **Add**. The assignment appears in the **Assignment Categories** list.

10. Click OK.

#### 4. Recompile the Design


To recompile the design and implement your new assignment:

✓ Choose Start Compilation (Processing menu).

#### 5. View the Fit in the Last Compilation Floorplan

To view the fit in the Last Compilation floorplan, follow these steps:

- 1. Choose Open Last Compilation Floorplan (Processing menu).
- 2. To increase the size of the Floorplan Editor window, turn on Full Screen (View menu). Note that the pin-out has been preserved from the previous fit and that logic has been implemented in ESBs.
- 3. If necessary, click the **Selection Tool** button on the Floorplan Editor toolbar.
- 4. With the Selection Tool, point to some of the used ESBs, located at the center of row 1. The names of the signals appear in "bubble text." The signal names all start with "state\_m," indicating that they are part of the state\_m entity. See the following illustration:

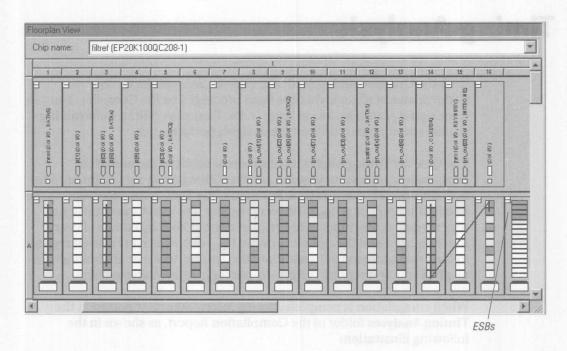


5. Turn off Full Screen (View menu).

## **Timing Analysis**

With the Quartus Timing Analyzer, you can analyze the timing performance of all logic that has been processed by the Compiler. You can trace signal paths and locate them in the Floorplan Editor, determining critical speed paths that limit the design's performance.

The Quartus Timing Analyzer runs automatically at the end of the compilation process, or you can run the Timing Analyzer separately after first-time project compilation. By default, the Timing Analyzer reports the maximum frequency ( $\mathbf{f}_{MAX}$ ) of every register, the worst-case register to register delays, the input setup ( $\mathbf{t}_{SU}$ ) and input hold ( $\mathbf{t}_{H}$ ) times of every input register, and the clock-to-output ( $\mathbf{t}_{CO}$ ) delays of every output register in the design hierarchy. In addition, the Timing Analyzer analyzes all pinto-pin paths and reports the pin-to-pin ( $\mathbf{t}_{PD}$ ) delays between pins.

When compilation is complete, timing information is reported in the **Timing Analyses** folder of the Compilation Report, as shown in the following illustration:

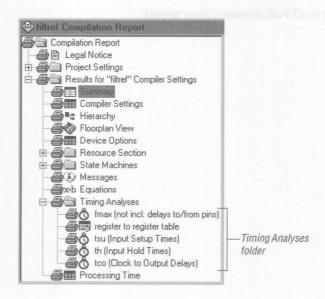

The following tutorial sessions guide you through the steps necessary to view the timing analysis results in the Compilation Report window, specify timing requirements, perform multi-clock timing analysis, and assign a multicycle path.

## **Session 10: View Timing Analysis Results**

After you compile a design, you can view the timing analysis results in the Compilation Report. This session includes the following steps:

- 1. View the  $f_{MAX}$  timing analysis report.
- 2. List the  $f_{MAX}$  timing paths.
- 3. Locate an f<sub>MAX</sub> timing path in the Floorplan Editor.
- 4. View the  $t_{SU}$  timing analysis report.



Go to "Viewing Timing Analysis Results in the Report Window" in Quartus Help for specific steps on viewing other timing analysis results.

#### 1. View the f<sub>MAX</sub> Timing Analysis Report

The **fmax** section of the Compilation Report shows the frequency requirements and worst-case speed performance of your design. The **fmax** section title indicates whether the  $f_{MAX}$  calculations include delays to and from device pins, according to the options you select in the **Clock Settings** tab of the **Timing Settings** dialog box (Project menu).

To open the **fmax** section of the Compilation Report, follow these steps:

- 1. If necessary, to open the Compilation Report, choose **Open Compilation Report** (Processing menu).
- 2. In the left pane of the Compilation Report window, click the + icon to expand the **Timing Analyses** folder.
- 3. Under the **Timing Analyses** folder, select the **fmax** section. The  $f_{MAX}$  information appears in a table. If you specify one or more timing requirements related to the current section, the "actual" values appear in red if your timing requirements have not been met.

4. To expand the list and display the destination registers associated with the clock, click the + icon next to the clk clock name. By default, the list expands to show the 10 slowest destination registers.




Go to "Specifying Timing Analysis Restrictions" in Quartus Help for information about customizing timing analysis reporting.

#### 2. List the f<sub>MAX</sub> Timing Paths

To list the  $f_{MAX}$  timing paths, follow these steps:

1. To expand the list and display the source registers feeding a destination register, click the + icon to expand the first destination register name in the **fmax** section. By default, the list expands to show the 10 slowest source registers. See the following illustration:

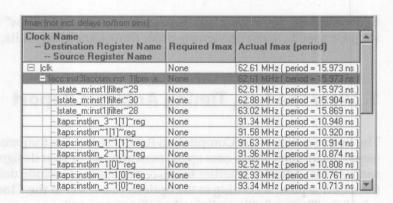




The actual source and/or destination register names may differ from those shown in the previous illustration due to improvements made in the Quartus software after this manual was printed.

- 2. Select the first source register name in the list.
- 3. Choose **List Paths** (right button pop-up menu). The delay paths for the source register, including intermediate delay paths, appear as messages in the **System** tab of the Messages window.


- 4. In the Messages window, click the + icon to expand the Internal fmax message. The Longest register to register delay, Smallest Clock skew, Micro clock to output delay, and Micro setup delay messages are displayed.
- 5. Click the + icon to expand the Longest register to register delay message. The intermediate time increments used to calculate the timing path delay are displayed. The following illustration shows a sample delay message. The actual values in the message may vary.

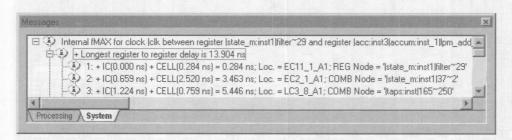

## 3. Locate an $f_{MAX}$ Timing Path in the Floorplan Editor

To locate the source of a timing path message in the Last Compilation floorplan, follow these steps:

- 1. In the Messages window, select the Longest register to register message.
- 2. Choose Locate (right button pop-up menu). The data path is highlighted in the floorplan, and the total timing path delay appears alongside the path. See the following illustration:

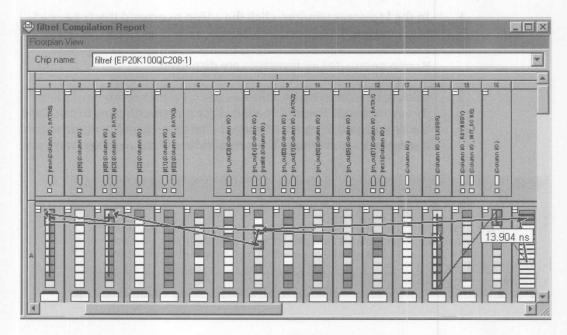

The actual data path and delay may differ from the previous illustration due to improvements made in the Quartus software after this manual was printed.

3. To close the Last Compilation floorplan, choose Close (File menu).

#### 4. View the t<sub>SU</sub> Timing Analysis Report

The tsu section of the Compilation Report displays any setup time requirements and the actual  $t_{SU}$  for the input pins that feed the data or clock enable inputs to the destination flipflop.

To open the tsu section of the Compilation Report, follow these steps:

- 1. In the left pane of the Compilation Report window, click the + icon to expand the **Timing Analyses** folder.
- 2. Under the **Timing Analyses** folder, select the **tsu** section. The input setup time information is displayed in a table.

76

- 3. To expand the list and display the register and clock name(s) associated with the data pin, click the + icon.
- 4. To return to the **filtref.bdf** block diagram, close the Compilation Report window.
- You can also view the Register-to-Register, th, tco, and tpd sections in the Compilation Report by modifying the procedures above. Go to "Viewing Timing Analyses Results in the Report Window" in Quartus Help for more information.


### **Session 11: Specify Timing Requirements**

In the Quartus software, you can specify timing requirements and options that apply to the entire project, to specific design entities, or to individual nodes and pins. For example, you can specify timing requirements for the setup time  $(t_{SU})$ , hold time  $(t_H)$ , clock-to-output delay  $(t_{CO})$ , pin-to-pin delays  $(t_{PD})$ , and maximum frequency  $(f_{MAX})$ .

You can specify timing requirements for the entire project with the **Timing Settings** command (Project menu). You can specify timing requirements for individual entities, nodes, and pins with the **Assignment Organizer** command (Tools menu).

This session includes the following steps:

- 1. Specify the default required  $f_{MAX}$ .
- 2. Cut timing paths.

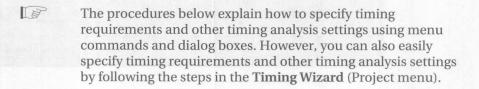


#### 1. Specify the Default Required f<sub>MAX</sub>

You can specify a target circuit frequency with the  $f_{MAX}$  timing setting. You can specify a default  $f_{MAX}$  for an entire project, or you can specify a required  $f_{MAX}$  for selected portions of the project.

To specify the default required  $f_{MAX}$ , follow these steps:

- Choose Timing Settings (Project menu). The Clock Settings tab opens automatically.
- 2. Under Specify circuit frequency as, select Default required fmax.
- 3. In the **Default required fmax** box, type 45 and select **MHz** in the list. See the following illustration:

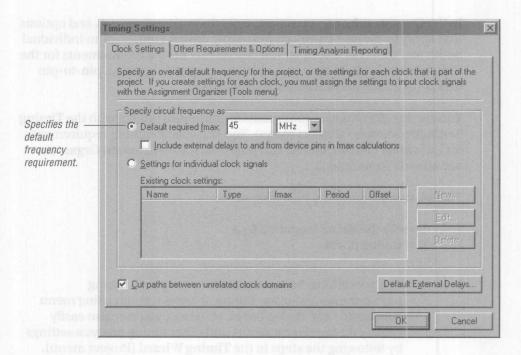

P

You can override the default required  $f_{MAX}$  for the project by creating clock settings and assigning them to individual clock signals in your design, as described in "Session 12: Perform Multi-Clock Timing Analysis" on page 79.

#### 2. Cut Timing Paths

You can cut specific signal paths to direct the Timing Analyzer to ignore false paths during timing analysis. You can turn on options in the **Other Requirements & Options** tab of the **Timing Settings** dialog box to cut all instances of specific categories of paths, or you can cut specific paths on a node-by-node basis with the **Cut Timing Path** option in the **Assignment Organizer** dialog box.

To cut off feedback from I/O pins, follow these steps:

- 1. In the Timing Settings dialog box, click the Other Requirements & Options tab.
- 2. Make sure that Cut off feedback from I/O pins is turned on.
- Click OK. The Timing Analyzer ignores all signal feedback from within the device.



Go to "Specifying Project Timing Requirements" in Quartus Help for information about specifying  $\mathbf{t}_{SU}$ ,  $\mathbf{t}_{H}$ ,  $\mathbf{t}_{CO}$ , and  $\mathbf{t}_{PD}$  timing requirements.

# Session 12: Perform Multi-Clock Timing Analysis

The Quartus Timing Analyzer automatically performs single-clock frequency analysis as part of compilation. However, the Timing Analyzer can also perform timing analysis on designs that use complex timing assignments, such as designs with multiple clocks.

To perform an accurate multi-clock analysis, you must first define the relationship between all clocks in the design. To define this relationship, you must specify which signals function as the absolute clocks (not dependent on other clocks) and the derived clocks (dependent on other clocks) in the design. In the Quartus software, you define the behavior and requirements of clocks by creating clock settings. Then, you assign these settings to the clock signals in the design.


This session includes the following steps:

- 1. Create clock settings.
- 2. Assign the clock settings to a pin.
- 3. Rerun timing analysis.
- 4. View the Clock Requirement timing analysis section.

#### 1. Create Clock Settings

To create an absolute clock setting, follow these steps:


- 1. Choose **Timing Settings** (Project menu). The **Clock Settings** tab opens automatically.
- 2. Under Specify circuit frequency as, select Settings for individual clock signals.
- 3. Click New. The New Clock Settings dialog box opens.
- 4. In the Clock settings name box, type clocka as the name for the new group of clock settings.
- 5. To specify that these clock settings are for an absolute clock, under Relationship to other clock settings, make sure that Independent of other clock settings is selected.
- 6. To specify the required  $f_{MAX}$  of the absolute clock, in the Required fmax box, type 50 and select MHz in the list. See the following illustration:

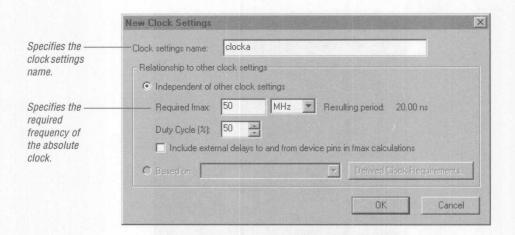

7. Click **OK**. The **clocka** settings appear in the **Existing clock settings** list.

To create a derived clock setting, follow these steps:

- 1. Click New. The New Clock Settings dialog box opens.
- 2. In the Clock settings name box, type clockb.
- 3. Under Relationship to other clock settings, select Based on and select clocka in the list.
- 4. To specify timing requirements for the derived clock, click **Derived Clock Requirements**. The **Derived Clock Requirements** dialog box opens.
- 5. To specify that the derived clock is a multiple of two of the absolute clock, select 2 in the **Multiply base absolute clock fmax by** box.
- 6. To specify that the derived clock is offset from the absolute clock, type 1.0 and select **ns** in the **Offset from base absolute clock fmax** box. See the following illustration:

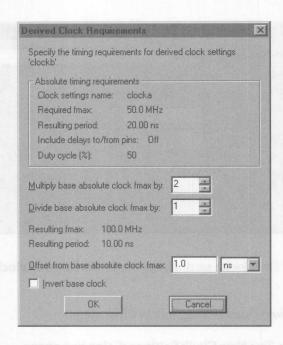


- 7. Click OK.
- 8. In the New Clock Settings dialog box, click OK to add the clockb clock settings to the Existing clock settings list.
- 9. In the Timing Settings dialog box, click OK.

#### 2. Assign the Clock Settings to a Pin


Once you have defined an absolute or derived clock setting, you must assign the setting to the appropriate clock signal(s) in the design. In the Quartus software, you use the **Assignment Organizer** command (Tools menu) to create, delete, edit, and view the assignments in the project.

To assign the  ${\tt clocka}$  settings to the  ${\tt clk}$  pin, follow these steps:


- 1. Choose **Assignment Organizer** (Tools menu). The **By Node** tab appears automatically.
- 2. Under **Mode**, select **Edit specific entity and node settings for**, as shown in the following illustration:

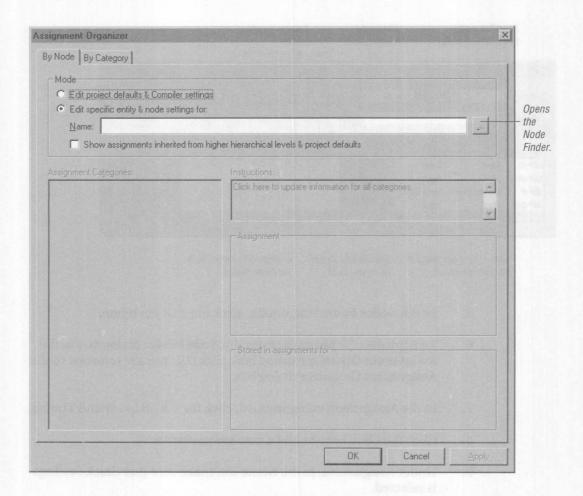


- 3. Under Mode, click Browse (...) next to the Name box. The Node Finder dialog box opens.
  - 4. To find the node you want to assign, in the Node Finder, select **Pins:** all in the Filter list and click **Start**. See the following illustration:

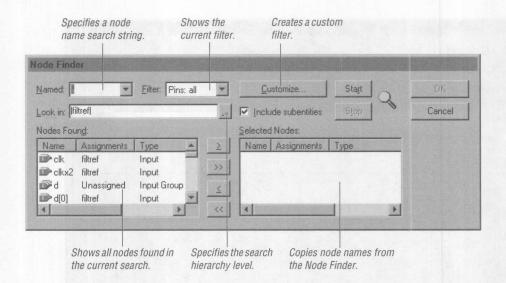

- 5. In the Nodes Found list, double-click the clk pin name.
- 6. To copy the clk pin name from the Node Finder dialog box to the Assignment Organizer dialog box, click OK. You are returned to the Assignment Organizer dialog box.
- 7. In the Assignment categories list, click the + icon to expand Timing.
- 8. Click the Click here to add a new assignment text.
- 9. Under Assignment, in the Name list, make sure that Clock Settings is selected.
- 10. To identify the clock settings that should be assigned to the pin, make sure that **clocka** is selected in the **Settings** list.
- 11. Click **Add**. The new assignment appears in the **Assignment Categories** list, as shown in the following illustration:

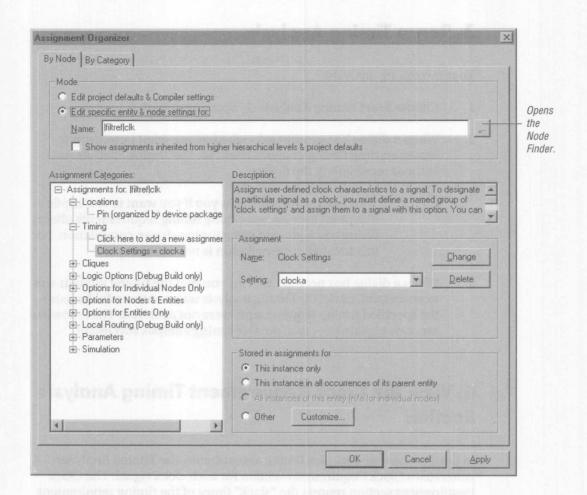

- 12. Click OK.
- 13. Repeat steps 1 through 12 to assign the **clockb** settings to the clkx2 pin.

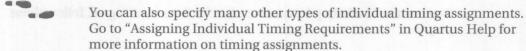

#### 3. Rerun Timing Analysis

To rerun timing analysis:

- 1. Choose Start Timing Analysis (Processing menu).
- When a dialog box prompt asks whether you want to recompile before starting timing analysis, click No. The timing analysis runs without recompiling the design.
  - The Quartus software asks you if you want to recompile at this point because specifying timing requirements affects fitting when you are using timing-driven compilation. For this tutorial, recompilation is not necessary.
- 3. When a dialog box prompt informs you that the timing analysis was unsuccessful, click **OK**. Timing analysis was unsuccessful because the specified timing requirements were not achieved. The following sections explain how to make this timing analysis successful.

## 4. View the Clock Requirement Timing Analysis Section

In designs that use complex timing assignments, the Timing Analyzer generates a Clock Requirement section for each clock signal. The Clock Requirement section reports the "slack" times of the timing requirement paths. Slack is the margin by which a timing requirement was achieved or not achieved. A positive slack, displayed in black, indicates that the requirement was achieved. A negative slack, displayed in red, indicates that the requirement was not achieved.

To view the Clock Requirement section for the clkx2 signal, follow these steps:

- 1. In the left pane of the Compilation Report window, click the + icon to expand the **Timing Analyses** folder.
- 2. Under the Timing Analyses folder, select the Clock Requirement section for the clkx2 signal. The timing analysis information is displayed in a multi-column table. If necessary, drag the resizing tool to resize columns in the table. See the following illustration:

Source Name	Destination Name	Source Clock Name	Destination Clock Name	Required Setup Relationship	Required Maximum P2P Time	Actual Maximum P2P Time	Slack
  acc:inst3 accum:inst_1	jinst5[0]	jelk	clkx2	1.000 ns	0.220 ns	1.553 ns	-1.333 ns
acc:inst3 accum:inst_1	linst5[2]	jclk	Jclkx2	1.000 ns	0.220 ns	1.505 ns	-1.285 ns
acc:inst3 accum:inst_1 I	linst5[3]	clk	clkx2	1.000 ns	0.220 ns	1.505 ns	-1.285 ns
acc:inst3 accum:inst_1	linst5[5]	clk	clkx2	1.000 ns	0.220 ns	1.482 ns	-1.262 ns
acc:inst3 accum:inst_1	[inst5[1]	clk	Jclkx2	1.000 ns	0.220 ns	1.466 ns	-1.246 ns
acc:inst3 accum:inst_1	linst5[4]	clk	clkx2	1.000 ns	0.220 ns	1.446 ns	-1.226 ns
acc:inst3 accum:inst_1 I	linst5[6]	Jelk	clkx2	1.000 ns	0.220 ns	1.445 ns	-1.225 ns
acc:inst3 accum:inst_1 I	inst5[7]	[clk	Jclkx2	1.000 ns	0.220 ns	1.257 ns	-1.037 ns
linst4	[inst5[0]	clk	clkx2	1.000 ns	0.220 ns	1.102 ns	-0.882 ns
linst4	linst5[2]	clk	clkx2	1.000 ns	0.220 ns	1.102 ns	-0.882 ns
Timing analysis restricte	To change the limit u						

Minimum setup requirement imposed by 1.0 ns offset of clockb settings.

Slack times in red indicate unachieved requirements.



The actual timing values may differ from those in the previous illustration due to improvements made in the Quartus software after this manual was printed.

The Clock Requirement section for the clkx2 signal displays slack times in red, indicating that the specified  $f_{MAX}$  requirement was not achieved along the path. "Session 13: Specify a Multicycle Path," next, describes how to specify a multicycle path that corrects this condition.


## Session 13: Specify a Multicycle Path

In the fir\_filter design, the 1.0 ns offset you specified for the clockb clock settings causes the Timing Analyzer to report that timing requirements were not met. This condition occurs because, by default, the Timing Analyzer uses the most restrictive setup relationship when analyzing paths between registers that are clocked by different clocks. The Timing Analyzer verifies that the data is present at the destination register in time to be properly latched.

In designs with multiple clocks, for every latch edge on the destination clock, the launching edge on the source register determines the delay requirement for the path. In the fir\_filter design, for every latch edge of the

destination register, the Timing Analyzer finds the nearest launch edge that precedes each capture edge. The smallest difference determines the maximum delay requirement. Figure 5 shows this condition in the fir\_filter design:


Figure 5. Default Multi-Clock Setup Relationship

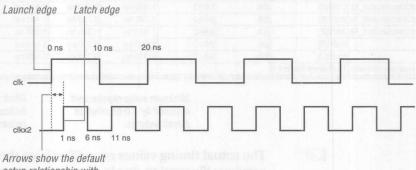

Arrows show the default setup relationship with 1 ns offset.

You can use the Multicycle timing assignment to specify a path that requires more than one clock cycle to propagate. Assigning a Multicycle of 2 to all registers clocked by clkx2 allows you to override the default setup relationship and delay the latch edge by one clock cycle. Figure 6 shows the multi-clock setup relationship after creating a Multicycle assignment of 2.

Figure 6. Multi-Clock Setup Relationship with Multicycle Assignment of 2

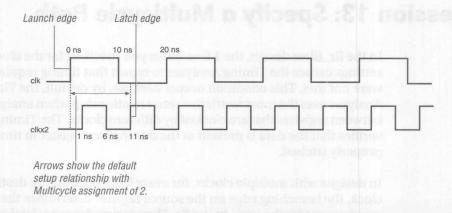

This session includes the following steps:

- 1. Create a Multicycle timing assignment.
- 2. Rerun timing analysis.
- 3. View the Clock Requirement timing analysis section.

#### 1. Create a Multicycle Timing Assignment

When you make a point-to-point assignment between two clock signals, the assignment is automatically applied to all register-to-register paths between the two clocks. To add the Multicycle assignment to all register-to-register paths between the clk and clkx2 pins, follow these steps:

- 1. If necessary, to open the **filtref.bdf** block diagram, choose **Open** (File menu) and select **filtref.bdf**.
- 2. In the filtref.bdf block diagram, select the clkx2 input pin.
- 3. Choose Assignment Organizer (right button pop-up menu). The Assignment Organizer dialog box opens, with the Edit specific entity & node settings for option selected, and with the hierarchical path name of the clkx2 pin shown in the Name box.
- 4. In the Assignment Categories list, click the + icon to expand Timing.
- 5. Click the Click here to add new assignment text.
- 6. Under Assignment, select Multicycle in the Name list.
- 7. To specify a multicycle path that requires two clock cycles to propagate, in the **Setting** box, type 2.
- 8. To specify a point-to-point assignment, in the Fed by box, type clk or click Browse (...) to select it with the Node Finder.
- 9. Click Add. The assignment then appears in the Assignment Categories list.
- 10. Click OK.

#### 2. Rerun Timing Analysis

To rerun timing analysis:

- 1. Choose **Start Timing Analysis** (Processing menu).
- 2. When a dialog box prompt asks whether you want to recompile before starting timing analysis, click **No**. The timing analysis runs without recompiling the design.
- 3. When a dialog box prompt informs you that the timing analysis was successful, click **OK**. Timing analysis was successful because the specified timing requirements were achieved.

## 3. View the Clock Requirement Timing Analysis Section

To view the timing analysis results to determine how setting the Multicycle assignment affected timing requirements, follow these steps:

- 1. In the left pane of the Compilation Report window, click the + icon to expand the **Timing Analyses** folder.
- 2. Under the Timing Analyses folder, select the Clock Requirement section for the clkx2 signal. The Clock Requirement section displays all slack times in black, indicating that all timing requirements were achieved after overriding the default setup relationship with the Multicycle assignment. See the following illustration:

Source Name	Destination Name	Source Clock Name	Destination Clock Name	Required Setup Relationship	Required Maximum P2P Time	Actual Maximum P2P Time	Slack
acc:inst3 accum:inst_1 lp	[inst5[0]	clk	clkx2	11.000 ns	10.220 ns	1.553 ns	8.667 ns
acc:inst3 accum:inst_1 lp	linst5[2]	clk	lclkx2	11.000 ns	10.220 ns	1.505 ns	8.715 ns
acc:inst3 accum:inst_1  p	[inst5[3]	clk	Jclkx2	11.000 ns	10.220 ns	1.505 ns	8.715 ns
acc:inst3 accum:inst_1  p	linst5[5]	clk	Jclkx2	11.000 ns	10.220 ns	1.482 ns	8.738 ns
acc:inst3 accum:inst_1 lp	linst5[1]	clk	Jclkx2	11.000 ns	10.220 ns	1.466 ns	8.754 ns
acc:inst3 accum:inst_1  p	linst5[4]	clk	Jclkx2	11.000 ns	10.220 ns	1.446 ns	8.774 ns
acc:inst3 accum:inst_1  p	linst5[6]	clk	Jclkx2	11.000 ns	10.220 ns	1.445 ns	8.775 ns
acc:inst3 accum:inst_1  p	[inst5[7]	clk	Jclkx2	11.000 ns	10.220 ns	1.257 ns	8.963 ns
linst4	[inst5[0]	clk	Jclkx2	11.000 ns	10.220 ns	1.102 ns	9.118 ns
linst4	linst5[2]	clk	Jclkx2	11.000 ns	10.220 ns	1.102 ns	9.118 ns
Timing analysis restricted	To change the limit		1217	Chiera and	Transaction	- Maria	

Minimum setup requirement reflects the Multicycle assignment of 2.

Slack times in black indicate achieved requirements.

91

TP

The actual timing values may differ from those in the previous illustration due to improvements made in the Ouartus software after this manual was printed.

### **Simulation**

Simulation allows you to test a design thoroughly to ensure that it responds correctly in every possible situation before you program or configure it into a device.

You must supply input vectors as the stimuli for the Quartus Simulator. The Simulator uses these input vectors to simulate the output signals that a programmed device would produce under the same conditions. In a typical simulation session, you create multiple sets of input vectors and check the resulting outputs.

Depending on the type of information you need, you can perform functional or timing simulation with the Simulator. Functional simulation tests only the logical operation of a design, while timing simulation tests both the logical operation and the worst-case timing for the design in the target device.

The following sessions guide you through the steps necessary to create a Vector Waveform File (.vwf), specify Simulator settings, run a timing simulation, and analyze the simulation results.

# Session 14: Create a Waveform File for Simulation

You can create Vector Waveform Files (.vwf) with the Quartus Waveform Editor to use as stimuli for simulation. VWFs describe the simulation input vectors and simulation outputs as graphical waveforms. You can also specify vector stimuli in a text-based Vector File (.vec). The Quartus software allows you to open vector files either in text or waveform format.



If you are already familiar with creating VWFs with the Quartus Waveform Editor, you can copy the Altera-provided fir.vwf file from the \quad \quad \text{qdesigns}\tutorial \text{ subdirectory into the \quad \quad qdesigns}\text{ fir\_filter} \text{ subdirectory. Altera recommends that you copy tutorial files by opening them in the Quartus software with the Open command (File menu), choosing Save As (File menu), turning on Add file to current project, and then saving the file to the

\qdesigns\fir\_filter subdirectory. If you copy the Alteraprovided file, skip to "Session 15: Specify Simulator Settings" on page 98.


This session includes the following steps:

- 1. Create a new VWF.
- 2. Add input and output nodes to the file.
- 3. Edit the input node waveforms.

#### 1. Create a New Vector Waveform File

To create a VWF, follow these steps:

- 1. Choose New (File menu).
- 2. To select VWF as the file type, click the **Other Files** tab and select **Vector Waveform File**.
- 3. Click **OK**. The Waveform Editor opens, displaying an empty waveform file, as shown in the following illustration:

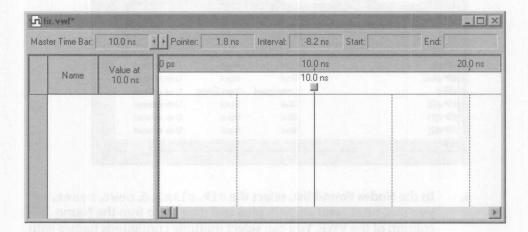

- 4. To change the end time for the file, choose **End Time** (Time menu).
- 5. In the Time box, type 700 and select **ns** in the list.
- 6. Click OK.


7. To save the file as **fir.vwf**, choose **Save As** (File menu), type fir in the **File name** box, and click **Save**.

#### 2. Add Input & Output Nodes to the File

You can create a VWF by entering some or all of the input node waveforms and the desired output node waveforms.

To add the nodes, follow these steps:

- To find the node names you want to add to the file, turn on Auxiliary Windows > Node Finder (View menu). The Node Finder dialog box is displayed.
- 2. In the Node Finder, select Pins: all in the Filter list.
- 3. To find the nodes you want to add to the VWF, click **Start**. See the following illustration:

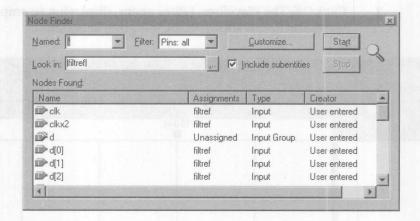

- 4. In the Nodes Found list, select the clk, clkx2, d, newt, reset, yvalid, next, and yn\_out pins and drag them into the Name column of the VWF. You can select multiple contiguous names with Shift+Click or select multiple non-contiguous names with Ctrl+Click.
- 5. To close the Node Finder, turn off **Auxiliary Windows** > **Node Finder** (View menu).




You can also create custom filters for finding nodes in the design with the Node Finder. Go to "Creating a Custom Filter" in Quartus Help for specific instructions about creating a custom filter.

#### 3. Edit the Input Node Waveforms

You create the input vectors for simulation by specifying the logic levels of the node waveforms. The logic level changes represent the behavior of signals in the design.

To edit the clk input node waveform, follow these steps:

- 1. If necessary, click the **Selection Tool** button on the Waveform Editor toolbar.
- 2. To select the entire clk input node waveform, click the Selection Tool on the "handle" of the clk node. The entire node is highlighted. See the following illustration:

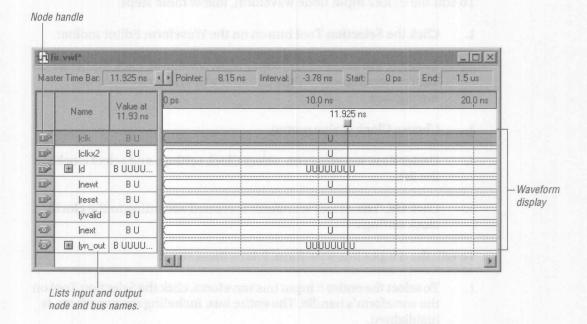

3. Choose Clock (Value menu).

4. Under Base waveform on, select Clock settings and select clocka in the list, as shown in the following illustration:



5. Click **OK**. The clk waveform is created according to the **clocka** clock settings.


To edit the clkx2 input node waveform, follow these steps:

- 1. Click the **Selection Tool** button on the Waveform Editor toolbar.
- 2. To select the entire clkx2 input node waveform, click the Selection Tool on the "handle" of the clkx2 node. The entire node is highlighted.
- 3. Choose Clock (Value menu).
- 4. Under Base waveform on, select Clock settings and select clockb in the list.
- 5. Click **OK**. The clkx2 waveform is created according to the **clockb** clock settings.

To edit the  $\ensuremath{\mathtt{d}}$  input bus waveform, follow these steps:

- 1. To select the entire d input bus waveform, click the Selection Tool on the waveform's handle. The entire bus, including the waveform, is highlighted.
- 2. Choose **Arbitrary Value** (Value menu).

- 3. In the Radix list, select Unsigned Decimal.
- 4. In the **Numeric or named value** list, type 16, as shown in the following illustration:

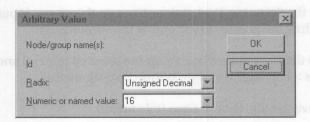

5. Click **OK**. The d input bus waveform is displayed with a binary value of 16.

To edit the newt input node waveform, follow these steps:


- 1. To select the entire newt input node, click the Selection Tool on the node's handle. The entire node is highlighted.
- 2. Choose Clock (Value menu).
- 3. Under Base waveform on, select Time period.
- 4. Type 80 in the **Period** box, and select **ns** in the list.
- 5. In the Duty Cycle list, specify 25.
- 6. Click **OK**. The waveform displays a repeating waveform with a period of 80 ns and a duty cycle of 25% on the newt input signal.

To edit the reset input node waveform, follow these steps:

- 1. Click the Selection Tool at time 0 ns on the reset input waveform and drag the pointer to time 20 ns.
- Press the right mouse button on the selected interval and choose
   Value > Forcing Low (right button pop-up menu).
- 3. Click the Selection Tool at time 20 ns on the reset input waveform and drag the pointer to time 40 ns.

- 4. Press the right mouse button on the selected interval and choose Value > Forcing High (right button pop-up menu).
- 5. To see the entire waveform, choose Fit in Window (View menu).
- 6. Click the Selection Tool at time 40 ns on the reset input waveform and drag the pointer to the end of the stimulus file.
- 7. Press the right mouse button on the selected interval and choose Value > Forcing Low (right button pop-up menu).
- 8. To save the file, choose Save (File menu).

The waveforms appear as shown in the following illustration:

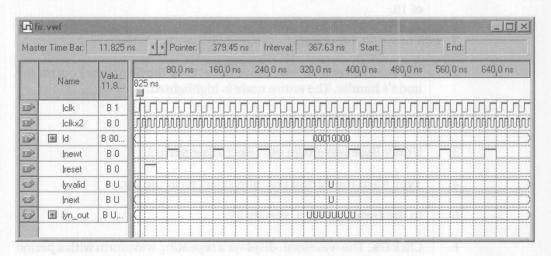

## **Session 15: Specify Simulator Settings**


The Quartus software allows you to simulate an entire design, or to simulate any part of a design. You can designate any top-level design entity in a project as the "simulation focus," which is the design entity you want to simulate.

The Simulator settings allow you to specify the simulation focus, the type of simulation that should be performed, the time period covered by the simulation, the source of vector stimuli, and other options.

You can create and save your own customized groups of settings for use with the Quartus Simulator, or you can use the settings that are generated automatically each time you create a new project.

This session includes the following steps:

- 1. View the Simulator general settings.
- 2. Specify Simulator time and vectors settings.
- 3. Specify Simulator mode settings.
- 4. Specify Simulator options.

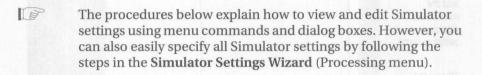


#### 1. View the Simulator General Settings

The **General** tab of the **Simulator Settings** dialog box (Processing menu) allows you to select an existing group of Simulator settings, define and save a new group of Simulator settings, specify the simulation focus, or delete existing settings.

To view the default Simulator general settings created for the current project, follow these steps:

- 1. Make sure that you are in Simulation mode by selecting **Simulate Mode** (Processing menu).
- 2. Choose **Simulator Settings** (Processing menu). The **General** tab opens automatically.

The **General** tab displays the default Simulator general settings created by the Quartus software when you created the project, as shown in the following illustration:

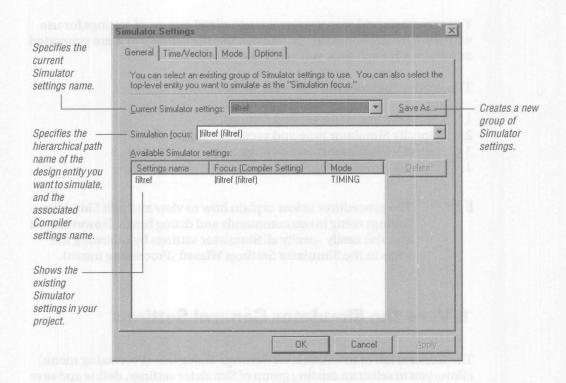


#### 2. Specify Simulator Time & Vectors Settings

The **Time/Vectors** tab of the **Simulator Settings** dialog box allows you to specify the time period covered by the simulation, and the source of vector stimuli. You can provide vector stimuli for simulation in a Vector Waveform File (.vwf) or a text-based Vector File (.vec), or you can enter vector stimuli in the Tcl Console window.

To specify the simulation time period and the source of vector stimuli, follow these steps:

- 1. In the Simulator Settings dialog box, click the Time/Vectors tab.
- 2. Under **Simulation period**, in the **Start time** box, type 0 and select **ns** in the list.
- Under End time, make sure that Run simulation until all vector stimuli are used is selected.

- 4. Under Vectors, in the Source of vector stimuli box, type D: \
  qdesigns\fir\_filter\fir.vwf, or click Browse (...) to select the file.
  - When you run a simulation, the Simulator automatically searches for a vector file (.vwf, .vec, or .tbl) with the same name as the current Simulator settings. Therefore, it is not necessary to explicitly specify a vector file if the vector file has the same name as the current Simulator settings.
- 5. Under Vectors, make sure that Automatically add pins to simulation output waveforms is turned on. See the following illustration:

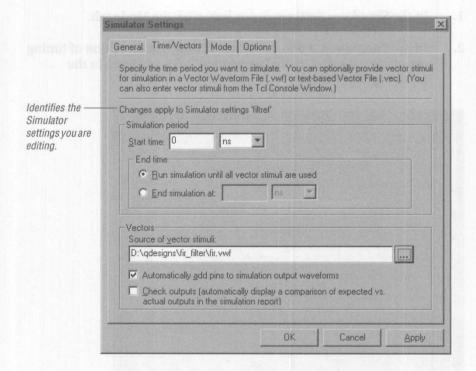


#### 3. Specify Simulator Mode Settings

The **Mode** tab of the **Simulator Settings** dialog box allows you to specify which type of simulation should be performed. Two types of simulation are available: functional simulation and timing simulation. Functional simulation tests the logical operation of the design by simulating the behavior of flattened netlists extracted from the design files. Timing simulation uses a fully compiled netlist, which includes actual timing information, to test the logical and timing performance of the design.

To specify the timing simulation mode, follow these steps:

- 1. In the Simulator Settings dialog box, click the Mode tab.
- 2. In the **Simulation mode** list, select **Timing**. A description of timing simulation appears in the **Description** field, as shown in the following illustration:

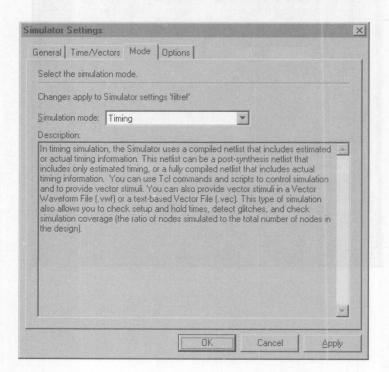


#### 4. Specify Simulator Options

The **Options** tab of the **Simulator Settings** dialog box allows you to specify options that monitor conditions found during simulation.

To monitor the simulation coverage, follow these steps:

- 1. In the Simulator Settings dialog box, click the Options tab.
- 2. Turn on **Simulation coverage reporting**. See the following illustration:

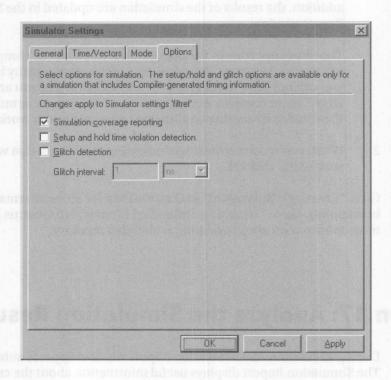

3. Click **OK**. All of the settings and options you specified are saved as the **filtref** Simulator settings. When you run the Simulator, these current Simulator settings are applied to the simulation.

## **Session 16: Simulate the Design**

To run the simulation, follow these steps:

1. Choose Run Simulation (Processing menu).

The Simulator immediately begins to simulate the **filtref** top-level design entity and all of its subordinate design entities, using the **filtref** Simulator settings and the **fir.vwf** vector file. As the Simulator processes the input vectors and simulates the design, the Status window opens automatically, displaying the simulation progress. In addition, the results of the simulation are updated in the Simulation Report window.

The Simulator runs in the background, freeing your computer for other work. However, the simulation of this design entity is short and you will not have to wait long for it to finish. When you analyze a larger, more complex design, you can always start a simulation and then switch to another application to continue your work.

2. When you receive a message indicating that simulation was successful, click **OK**.

Go to "Creating a Breakpoint" in Quartus Help for more information about breakpoints. Go to "Updating Embedded Memory" in Quartus Help for more information about updating embedded memory.

## **Session 17: Analyze the Simulation Results**

During simulation, the Simulation Report window appears automatically. The Simulation Report displays useful information about the current simulation. By default, the Simulation Waveform section appears in the Simulation Report window. The Simulation Waveform section shows the behavior of the specified outputs during simulation.

The Simulation Report also contains other useful sections that provide information about the current simulation, including information about the Simulator settings, simulation messages, and simulation processing times.

This session includes the following steps:

- 1. View the Simulation Waveform section.
- 2. Create a Time Bar.


#### 1. View the Simulation Waveform Section

Now that you have simulated the logic levels of the focus entity, the output node waveforms are defined. You can view and analyze the output logic levels in the Simulation Waveform section.

To view the Simulation Waveform section:

- 1. If necessary, in the left pane of the Simulation Report window, select Simulation Waveform.
- 2. To see the entire waveform, choose **Fit in Window** (View menu). The simulation waveform appears in the right pane of the Report window, as shown in the following illustration:

Figure 7. Simulation Waveform Section

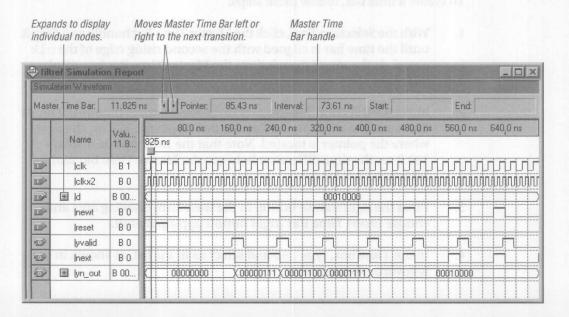

The Waveform Editor allows you to manipulate the data in the following ways:

- You can change the radix used to display group values. Select a group, choose **Properties** (right button pop-up menu), and select a new radix in the **Radix** list.
- You can move the Master Time Bar right and left to successive transitions. Click the movement arrows as shown in Figure 7 on page 105. You can also drag the Master Time Bar by its handle.
- You can zoom in and out with the Zoom Mode Tool on the Waveform Editor toolbar, and with the **Zoom In**, **Zoom Out**, **Fit in Window**, and **Zoom** commands (View menu).
- You can create additional time bars and use them to measure distances between transitions, as described in "2. Create a Time Bar," next.

#### 2. Create a Time Bar

To create a time bar, follow these steps:

- 1. With the Selection Tool, click the Master Time Bar handle and drag it until the time bar is aligned with the second rising edge of the clk signal. At the top of the window, the **Master Time Bar** box displays  $30.0 \, \text{ns}$ .
- 2. Move the Selection Tool pointer in the waveform to time of 160 ns. At the top of the window, the **Pointer** box displays 160.0 ns, the time where the pointer is located. Note that the **Interval** box displays 130.0 ns, the time difference between the Master Time Bar and the Selection Tool location.
- 3. Press the right mouse button in the waveform drawing area and choose **Insert Time Bar** (right button pop-up menu).
- 4. In the **Time** box, type 160 and select **ns** in the list, as shown in the following illustration:



Master Time Bar handle New time bar handle

5. Click **OK**. A new time bar appears on the waveform at 160.0 ns. The text +130.0 ns is shown above the second time bar, indicating the time difference from the new time bar to the Master Time Bar. See the following illustration:

( filtref Simulation Report \_ | X 30.0 ns Pointer: 32.42 n Interval: 2.42 ns Start: Master Time Bar: End: 80.0 ns 160,0 ns 240.0 ns 320.0 ns 400,0 ns 480,0 ns 560,0 ns 640,0 ns Valu.. 30.0. Name 30.0 ms +130.0 ns lclk B 1 Jclkx2 B 1 ⊞ ld B 00. B 0 newt B 1 reset BO lyvalid. 0 B 0 Inext ■ lyn\_out B 00..

You can move a time bar by dragging its handle to the desired point in the waveform. All measurement data is updated accordingly.

# **Programming**

With the Quartus Programmer, you can configure Altera APEX 20K devices and program the EPC2 configuration device. You can also verify, examine, and blank-check EPC2 configuration devices. The Programmer and programming hardware (the MasterBlaster or the ByteBlaster  $^{\text{\tiny TM}}$  communications cables) can easily configure a working device in minutes.

After a successful compilation, the Quartus Compiler generates one or more programming files, which the Programmer can use to program or configure one or more devices. You can download configuration data into APEX 20K devices through the MasterBlaster or the ByteBlasterMV communications cable.

You can configure APEX 20K devices in either Passive Serial configuration mode or in JTAG mode. You can program one or more configuration devices in JTAG mode. These devices can be programmed in the top-to-bottom order specified in the programming list of the Programmer window. However, this tutorial explains how to program only a single device.

This session assumes that the project has already been compiled.

## Session 18: Program an Altera Device

The following steps are covered in this session:


- 1. Open the Programmer window.
- 2. Set up a Passive Serial chain.
- 3. Configure the device.
- 4. Change programming modes.
- 5. Add a device to a chain.

#### 1. Open the Programmer Window


When you are getting ready to program or configure a device, you need to open the Programmer and create a Chain Description File (.cdf) that stores device name, device order, and programming and hardware setup information. You can use CDFs to program or configure one or more devices in a JTAG chain or a Passive Serial chain.

To open the Programmer window and create a CDF, follow these steps:

- 1. Choose New (File menu).
- 2. In the New dialog box, click the Other Files tab.
- 3. From the **Other Files** list, select **Chain Description File**, as shown in the following illustration:

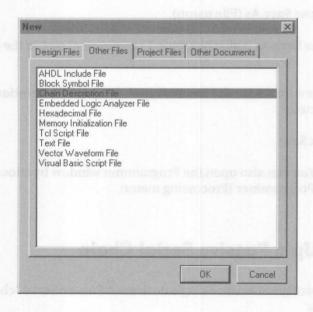

4. To create the Chain Description File, click **OK**. The Programmer window opens a blank CDF, as shown in the following illustration:

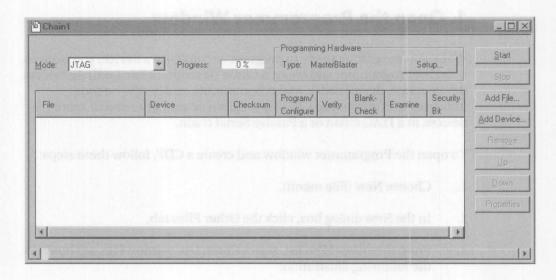


- 5. Choose Save As (File menu).
- 6. In the Save As dialog box, type fir\_filter.cdf in the File name box.
- 7. Make sure that in the **Save as type** list, **Chain Description File** is selected.
- 8. Click Save.
- You can also open the Programmer window by choosing **Open Programmer** (Processing menu).

#### 2. Set Up a Passive Serial Chain

To set up configuration for a single device in a Passive Serial "chain," follow these steps:

- 1. In the Mode list of the Programmer window, select Passive Serial.
- 2. Under Programming Hardware, click Setup. The Hardware Setup dialog box opens.

- 3. In the **Hardware Type** list, select either **ByteBlasterMV** or **MasterBlaster** and, if necessary, specify the port and baud rate. Click **OK**.
  - 4. Click Add File.
  - 5. In the Select File dialog box, specify the filtref.sof file in the File name box.
  - 6. Click **Open**. See the following illustration:

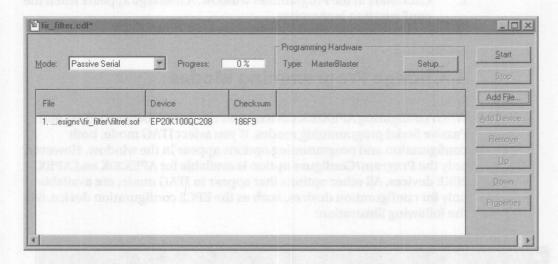

7. Choose Save (File menu).

If you want to program multiple devices, you can repeat steps 1 through 5 to add additional devices. However, for the purposes of this tutorial, only one programming file is necessary.

#### 3. Configure the Device

To configure the device(s), follow these steps:

1. To attach the appropriate communications cable to your PC or UNIX workstation, perform one of the following steps:

Attach the ByteBlasterMV or MasterBlaster cable to your PC. Refer to the *Quartus Installation & Licensing for PCs* manual for more information.


or

- Attach the MasterBlaster cable to your UNIX workstation.

  Refer to the *Quartus Installation & Licensing for UNIX*Workstations manual for more information.
  - 2. Click **Start** in the Programmer window. A message appears when the configuration is complete.

### 4. Change Programming Modes

When configuring APEX20K devices, you can switch between JTAG and Passive Serial programming modes. If you select JTAG mode, both configuration and programming options appear in the window. However, only the **Program/Configure** option is available for APEX20K and APEX 20KE devices. All other options that appear in JTAG mode, are available only for configuration devices, such as the EPC2 configuration device. See the following illustration:

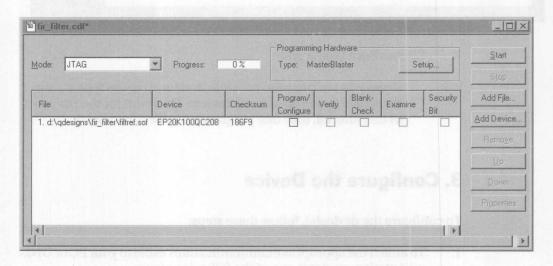


#### 5. Add a Device to a Chain

You can add devices to a JTAG or Passive Serial chain using the Programmer window. When you add a configuration device to the chain, you can turn on the **Examine** option to load the programming data from the device into a temporary buffer. Then, you can save the programming data to a Programmer Object File (.pof).

If you want the Programmer to bypass a device in the chain, that is, to allow data to pass through it without performing any programming action, turn off all programming options—Program, Verify, Blank-Check, and Examine—for the device.

To add a device to a JTAG chain, follow these steps:

- 1. In the Programmer window, click Add Device.
- 2. In the **Select Device** dialog box, select the device you want to add in the **Devices** list.
- 3. Click OK.
- 4. Choose Save (File menu).
- If you want to add additional devices, you can repeat steps 1 through 3. However, for the purposes of this tutorial, only one device is necessary.

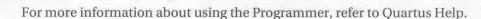

# Contacting Altera

If you have any additional questions about Altera products, contact Altera for technical support and product information.

### Technical Support

If you need technical support, call or fax the Altera Applications Department Monday through Friday.

**Tel:** (800) 800-EPLD (6:00 a.m. to 6:00 p.m. Pacific Time)

(408) 544-7000 (7:30 a.m. to 5:30 p.m. Pacific Time)

Fax: (408) 544-6401

You can also e-mail the Altera Applications Department at sos@altera.com.

In addition, you can visit the **Atlas**<sup>SM</sup> online solutions database, which is located at **http://www.altera.com**.

For additional technical support for the Quartus software, choose **Altera on the Web > Quartus Home Page** (Help menu), or point your browser to the Quartus support page at **https://websupport.altera.com**. This web site provides information on how to register your software and obtain license information, and provides other support information.

#### **Product Information**

If you need the latest Altera product information or literature, use the Altera web site, which is available 24 hours a day, seven days a week.

Web site: http://www.altera.com

-

Go to "Contacting Altera" in Quartus Help for complete information on Altera technical support services.